



# TABLE OF CONTENTS

	<b>Page</b>
<b>INTRODUCTION</b> .....	<b>1</b>
Special Features .....	2
Parts Check List .....	3
<b>FCC AND IC REGULATIONS</b> .....	<b>4</b>
<b>IMPORTANT SAFETY INSTRUCTIONS</b> .....	<b>7</b>
<b>REPLACING THE BATTERIES</b> .....	<b>9</b>
<b>GETTING STARTED</b> .....	<b>11</b>
<b>THE LCD DISPLAY</b> .....	<b>15</b>
<b>THE HANDSET LAYOUT</b> .....	<b>16</b>
<b>THE BASESET LAYOUT</b> .....	<b>17</b>
<b>QUICK REFERENCE GUIDE</b> .....	<b>18</b>
<b>BASIC OPERATION</b> .....	<b>20</b>
<b>ADVANCED FUNCTIONS</b> .....	<b>21</b>
CID With Call Waiting .....	21
Switching Calls .....	21
Temporay Tone .....	21
Programming The Ringer .....	21
Changing Ringer Types .....	21
Turning Off The Ringer .....	22
Checking The Ringer Type .....	22
CLR/DEL Key Function .....	22
Advanced Dialing .....	22
<b>MEMORY DIALING</b> .....	<b>23</b>
Storing Speed Dial Numbers .....	23
Dialing From Memory .....	24
Changing Stored Numbers .....	24
Deleting Stored Numbers .....	24
Storing Special Codes .....	25
<b>CID-CALLER ID</b> .....	<b>26</b>
CID-CALLER ID .....	26
Receiving and Storing Calls .....	26
Dialing From CID Memory .....	26
Out Of Area Calls .....	27
"Private" Calls .....	27
Transmission Error .....	27
Reviewing Numbers .....	28
Deleting Numbers .....	29
<b>SPECIAL MESSAGE INDICATION</b> .....	<b>30</b>
<b>MAINTENACE</b> .....	<b>31</b>
<b>IN CASE OF DIFFICULTY</b> .....	<b>32</b>
<b>WARRANTY</b> .....	<b>34</b>
<b>TECHNICAL SPECIFICATIONS</b> .....	<b>35</b>

# INTRODUCTION

Congratulations! You have purchased one of the most sophisticated cordless telephones on the market! The VTech VT 1910c has been designed to offer a new standard in cordless telephone technology.

Unlike most other cordless phones, the VTech VT 1910c digitizes your voice using advanced ADPCM digital voice coding to provide noise and distortion free performance. In most conditions you will not be able to tell you are using a cordless phone. Gone are the annoyances of static, interference and having to listen to other people's conversations on your cordless phone.

The VTech VT 1910c scrambles your voice before it transmits it. This allows you the security of knowing that no one can tune in and eavesdrop on your conversations.

The VTech VT 1910c decodes and displays name and number Caller ID (CID) information where available and when subscribed to. The alpha-numeric display will show both the name and number of the calling party. Up to 24 name characters or 11 phone number digits can be displayed on the LCD.

With the VTech VT 1910c the user can easily answer a call on the handset by simply pressing any key other than the OFF, MUTE or Volume Keys. This is very useful in a dark environment, so that the user does not have to fumble around looking for the PHONE key to answer the call.

The VTech VT 1910c also provides a one-way Page/find. Pressing the base PAGE key will cause the handset to ring in a manner which distinguishes it from normal incoming ringing. This can be used to alert the handset user or to simply locate the handset in the event that it is misplaced.

The VTech VT 1910c uses special memory in both the base and handset which is not susceptible to power failures. This provides permanent storage of all speed dial numbers, CID information as well as the base and handset security codes.

When a spare battery is installed in the base unit, the VTech VT 1910c uses this battery to provide operational backup in case of power failure. In this way you have access to all normal phone functions during a total power outage. Calls can still be placed and received without interruption. More than 5 hours backup will be possible with a fully charged battery in the base unit.

The VTech VT 1910c also informs you that another extension is currently off-hook on the same phone line. The phone will also alert you when you are Out of Range even when you're not using the phone!

# INTRODUCTION

## SPECIAL FEATURES

- 900 MHz Operation.
- Fully Digital Link between Handset and Base with ADPCM voice coding.
- Digitally-Scrambled Voice Communication.
- Name / Number CID display.
- 2 row by 12 character 5x7 dot matrix alpha-numeric LCD.
- 50 CID memories.
- Backlit LCD on the handset.
- Backlit handset keypad.
- 20 location Programmable Memory for 20 Digit Phone Number.
- 10 Channel Operation with auto channel selection.
- Out-of-Range indication while the handset is in use or in standby mode.
- Removable handset battery pack.
- Spare battery charger in the base unit.
- Complete battery back-up in case of power failure (with spare battery installed in base).

- Easy answer - When the phone rings simply press any key other than OFF, MUTE, or the Volume Keys on the handset to answer.
- Auto hang up when returning the handset to the base cradle.
- Extension in use indicator.
- 24 Bit Digital Security Code for 16.8 million combinations.
- DTMF and Pulse Dialing.
- Low Battery Detect and Warning indicator.
- Handset Power Saving for 7 days Standby time 7.0 Hours continuous talk time.
- Volume Adjust on Handset.
- REDIAL, HOLD, PAGE and MUTE.
- Hearing-Aid Compatible Receiver.
- Detachable power supply.
- Non-volatile storage of security code and speed dial memories.
- Programmable Ringer Types.

This manual is designed to make you familiar with the VTech VT 1910c. We strongly recommend you read the manual before using your phone.


# INTRODUCTION

# FCC and IC REGULATIONS

## Parts Check List

1. Base unit, Handset and AC adapter
2. One-Line Telephone Cord
3. Battery Pack
4. Mounting screws for wall mounting
5. Wall mount accessory

To purchase replacement battery packs, call VTECH Communications at 1-800-624-5688. In Canada, call VTECH Electronics at 1-800-267-7377.

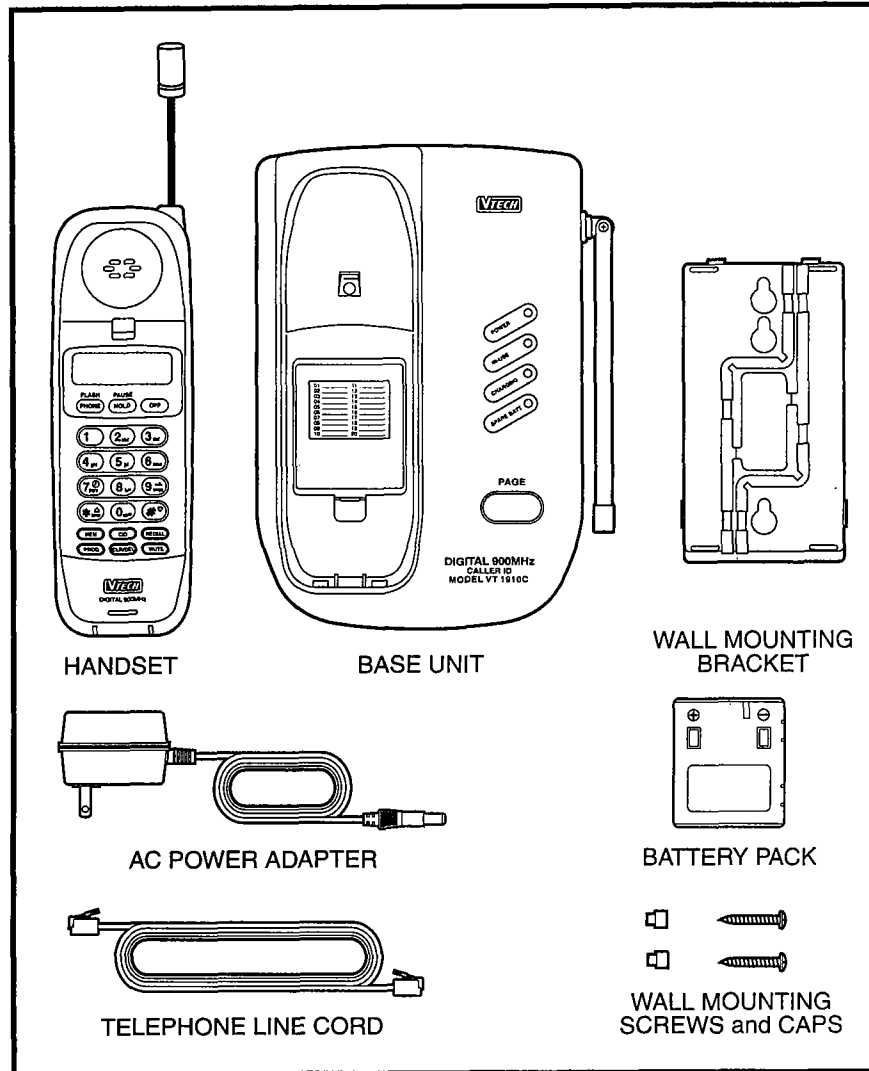

This equipment complies with Parts 15 and 68 of the Federal Communications Commission (FCC) rules for the United States. It also complies with regulations RSS210 and CS-03 of Industry and Science Canada. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

A label is located on the underside of the base unit containing either the FCC registration number and Ringer Equivalence Number (REN) or the IC registration number and Load Number. You must, upon request, provide this information to your local telephone company.

This equipment is compatible with inductively coupled hearing aids.

Should you experience trouble with this telephone equipment, please contact:

**VTECH COMMUNICATIONS**  
SERVICE DEPT. at 1-800-624-5688.  
In Canada, call VTECH Electronics at 1-800-267-7377.

For repair/warranty information. The telephone company may ask you to disconnect this equipment from the line network until the problem has been corrected.

## FCC Part 15

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance's could void the user's authority to operate the equipment.

The equipment has been tested and found to comply with part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet or on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## FCC and IC Regulations

### FCC Part 68

The FCC requires that you connect your cordless telephone to the nationwide telephone network through a modular telephone jack (USOC RJ11C, RJ11W or RJ14).

Your telephone company may discontinue your service if your equipment causes harm to the telephone network. They will notify you in advance of disconnection, if possible. During notification, you will be informed of your right to file a complaint with the FCC.

Occasionally, your telephone company may make changes in its facilities, equipment, operation, or procedures that could affect the operation of your equipment. If so, you will be given advance notice of the change to give you an opportunity to maintain uninterrupted service.

The base unit contains no user serviceable parts. The handset contains a user replaceable battery pack.

If it is determined that your telephone equipment is malfunctioning, the FCC requires that it not be used and that it be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents or by others who may be authorized by the FCC. For repair procedures, follow the instructions outlined under the VTECH Limited Warranty.

This equipment may not be used on coin service provided by the phone company or Party Lines.

The REN is useful in determining the number of devices you may connect to your telephone line and still enable the devices to ring when you receive a call. The general rule is that the REN value should not exceed 5.0A total; however, contact your local telephone company for the specific number in your area.

### IC (Industry Canada)

This telephone is registered for use in Canada.

**Notice:** The LOAD NUMBER (LN) assigned to each terminal device denotes the percentage of the total load to be connected to a telephone loop which is used by the device, to prevent overloading. The termination of a loop may consist of any combination of devices subject only to the requirement that the sum of the load numbers of all devices not exceed 100.

**Notice:** The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements. The Department does not guarantee the equipment will operate to the user's satisfaction.

## FCC and IC Regulations

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of services in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

**Caution:** Users should not attempt to make such connections themselves, but should contact the appropriate electrical inspection authority, or electrician, as appropriate.

Your VTech VT 1910c is designed to operate at the maximum power allowed by the FCC and IC. This means your handset and base unit can communicate only over a certain distance - which will depend on the location of the base unit and handset, weather, and the construction and layout of your home or office.

If you move the handset out of range during a phone conversation, you will hear an 'Out of Range' tone to tell you to move closer to the base. If you do not move within range within 25 seconds the call is automatically disconnected.

If you move out of range when the handset is in standby mode, it will give an 'Out of Range' tone to tell you that the handset will not be able to receive or place calls.

## IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water (for example, near a bath tub, kitchen sink, or swimming pool).
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. Slots and openings in the cabinet and the back or bottom are provided for ventilation. To protect it from overheating, these openings must not be blocked by placing the product on the bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation where proper ventilation is not provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by persons walking on it.
9. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
10. To reduce the risk of electric shock, do not disassemble this product, but take it to a VTech authorized service facility. Opening or removing cabinet parts other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the appliance is subsequently used.
11. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.

## IMPORTANT SAFETY INSTRUCTIONS

12. Unplug this product from the wall outlet and refer servicing to a VTech authorized service facility under the following conditions:

- A. When the power supply cord or plug is damaged or frayed.
- B. If liquid has been spilled into the product.
- C. If the product has been exposed to rain or water.
- D. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, because improper adjustment of other controls may result in damage and will often require extensive work by a VTech authorized technician to restore the product to normal operation.
- E. If the product has been dropped and the cabinet has been damaged.
- F. If the product exhibits a distinct change in performance.

13. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.

14. Do not use the telephone to report a gas leak in the vicinity of the leak.

**VTECH COMMUNICATIONS**  
SERVICE DEPT. at 1-800-624-5688.  
In Canada, call VTech Electronics at 1-800-267-7377.

**SAVE THESE INSTRUCTIONS**

# REPLACING THE BATTERY PACK

## Charging the handset batteries

The handset of your VTech VT 1910c cordless telephone is powered by a rechargeable battery pack. It charges automatically whenever the handset is in the base. You should charge the battery pack for 16 hours when you first receive your phone. You'll know the battery pack needs charging when:

- The phone beeps when you press the PHONE key.
- The low battery message is displayed:

**LOW BATTERY**

- The handset seems completely dead, the LCD is completely clear and the handset does not beep when you press the keys.

## To Charge The Battery Pack

To charge the battery pack, place the handset in the base unit. The CHARGE indicator will light to show the handset is seated properly and the battery pack is charging. It is recommended that the battery pack be charged for at least 8 hours. You can use your telephone before that with diminished capacity, but it is best to charge the battery fully. It will take several recharge cycles to maximize the charge capacity of your battery pack. The maximum battery life between charges is 7 hours of continuous talk time or 7 days of stand by.

Alternatively, if you have purchased a spare battery pack and it has been charging in the base unit, simply

exchange the drained handset battery pack with the fully charged replacement battery pack from the base charger. Place the drained handset battery pack into the base charger so that it will charge.

The base spare battery charger does NOT charge a battery PACK as quickly as the main handset battery charger. A full charge requires 24 hours.

## IT'S IMPOSSIBLE TO OVER-CHARGE THE BATTERY PACK


The battery pack can be recharged many times but if you get a low-battery signal even after 8 hours of charging in the base cradle (or 24 hours in the base spare battery charger), the battery pack(s) should be replaced.

To purchase replacement battery packs, call VTECH Communications at 1-800-624-5688. In Canada, call VTECH Electronics at 1-800-267-7377.

## Replacing The Handset Battery Pack


Follow the steps below:

1. Remove the battery case cover by pressing on the ridged lines and sliding downward.

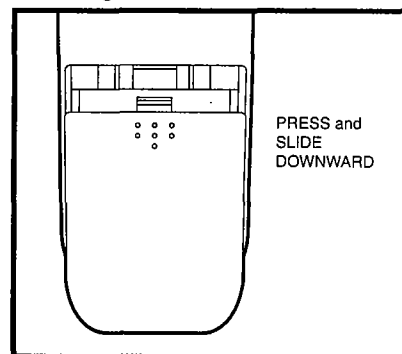


# REPLACING THE BATTERY PACK

2. Discard the old battery pack. Don't put the old battery pack in a trash compactor or a fire - it could burst.
3. Place the new battery pack in its housing with the metal contacts facing down.

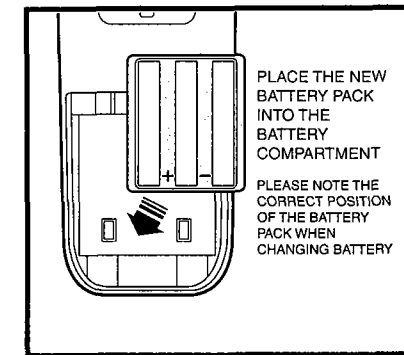

4. Replace the battery case cover by sliding the cover upwards.

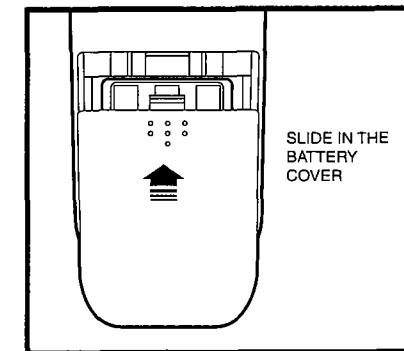

5. If the new battery pack is not already charged, place the handset in the cradle of the base unit to allow it to charge for 16 hours.

**CAUTION:**  
To Reduce the Risk of Fire or Injury to Persons, Read and Follow the Instructions

1. Use only VTECH rechargeable battery pack.
2. Do not dispose of the battery in a fire. The cell may explode.

**IMPORTANT:** Do not dispose of this battery into household garbage. For information on recycling or proper disposal, consult your local solid waste collection or disposal organization.

3. Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
4. Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.

To purchase replacement battery packs, call VTECH Communications at 1-800-624-5688. In Canada, call VTECH Electronics at 1-800-267-7377.


# GETTING STARTED

## Setting Up Your VTech VT1910c

1. Choose an area near an electrical outlet and a telephone wall jack.
2. Connect your telephone Line Cord.

## AC Power Adapter

Plug the AC power adapter into an electrical outlet and the DC connector to the back of the base unit.

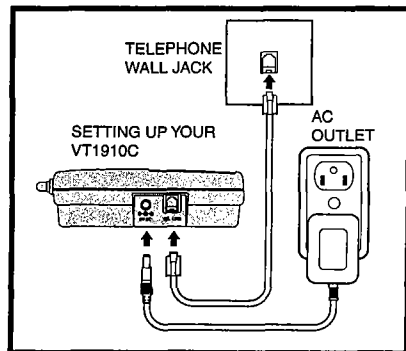


**CAUTION:**  
Use CLASS 2 POWER SUPPLY ONLY and use 9V DC.

## Handset Ringer


The handset ringer is programmed ON as the factory default setting. Refer to **PROGRAMMING THE RINGER** on page 21 for more information.

## Setting the Tone/Pulse Switch


The **TONE/PULSE** switch is located on the bottom of the base unit and is factory set to **TONE**. If you have touch tone service, do not change the switch setting. If you have rotary (Pulse) service, set the switch to **PULSE**.

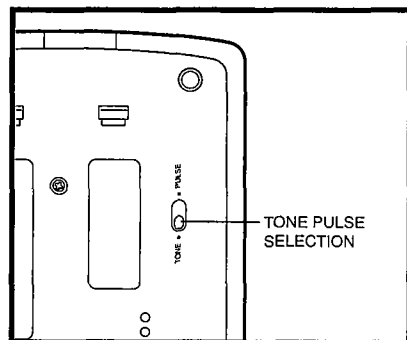

**Charge the handset battery pack before use.** The battery pack recharges automatically whenever the handset is in the base unit. The batteries must be charged for 16 hours before using your phone for the first time.

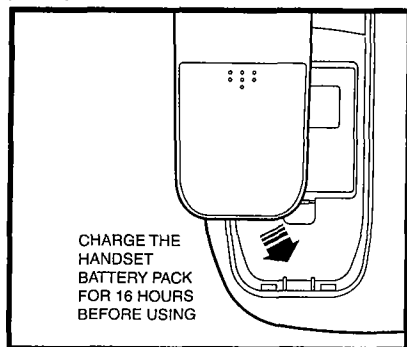

Fill in the telephone number card on the base unit.

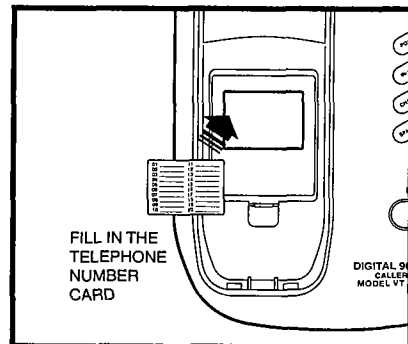

# GETTING STARTED

**Check for a dial tone.** After the batteries are charged, pick up the handset. Now press **PHONE** on the handset. "**PHONE ON**" will appear on the LCD, and you will hear a dial tone. If not, see '**IN CASE OF DIFFICULTY**' on page 32.

## CAUTION:

1. Never install telephone wiring during a lightning storm.
2. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
3. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
4. Use caution when installing or modifying telephone lines.

# GETTING STARTED

## WALL INSTALLATION USING MOUNTING SCREWS PROVIDED

**Tools You Will Need:** A hammer, a nail, a pencil or ballpoint pen, a Phillips head (+) screwdriver, and the Wall Mounting Template included in the back of this booklet.

### 1. Choose a spot near an electrical outlet and a telephone jack.

Your phone requires a modular telephone jack and a standard electrical outlet (120v AC). The power cord is six feet long; make sure there is an electrical outlet within reach of the base. The outlet should not be controlled by a wall switch. If the switch is ever turned off, the phone will not operate.

### 2. Choose and mark the mounting position.

The mounting screws should screw into a wooden stud within the wall—they will not hold securely in wallboard alone. Locate a wall stud in the area where you want to install your telephone. Use the Wall-Mounting Template and a pencil to mark the screw positions on the wall over the stud (Figure 1). Put the template aside.

### 3. Install the mounting sleeves and screws.

Start the screw holes by lightly tapping a nail into the marks you made on the wall. Remove the nail from the wall. Now slip the mounting sleeves onto the screws

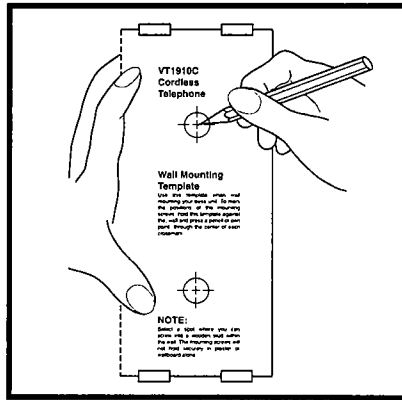


Figure 1

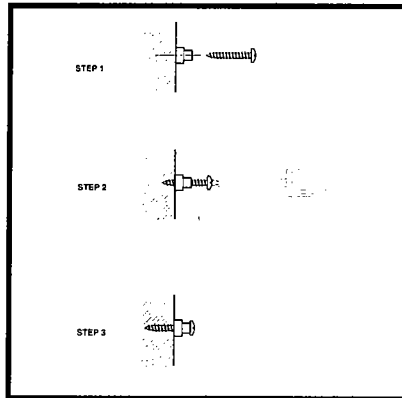


Figure 2

as shown, with the smaller end of the sleeve toward the screw head. Insert the screws into the holes you started. Tighten the screws until the larger end of the mounting sleeve is flat against the wall (Figure 2).

# GETTING STARTED

## USING THE WALL MOUNT ADAPTOR

### 1. Position the wall mount bracket on the base.

Line up the tabs on the wall mount adaptor with the holes on the bottom of the base (Figure 1). Snap the wall mount bracket firmly in place.

### 2. Mount the base on the wall.

Position the base so the mounting studs will fit into the holes on the bottom of the base. Position the power cord to extend down the wall the phone is to be mounted on. Slide the base down on the mounting studs until it locks into place.

### 3. Connect the telephone line cord.

The telephone line cord has a snap-in plug at each end. Insert one of the plugs into the jack on the bottom of the base. Insert the other end of the plug into the wall jack.

### 4. Plug the ac adaptor on the power cord into an electrical outlet (Figure 2).

### 5. Set the TONE/PULSE SWITCH on the base unit.

If you have touch tone service on your phone line, set the switch to TONE. If you have rotary service, set the switch to PULSE (Figure 3).

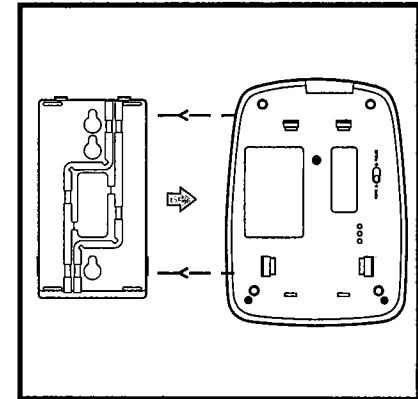


Figure 1

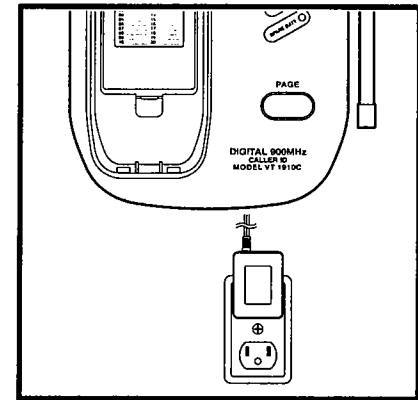


Figure 2


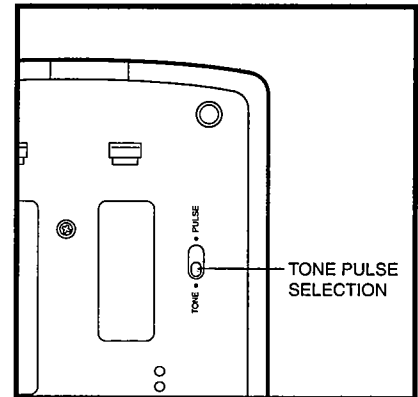


Figure 3

# THE LCD DISPLAY



LCD Display Messages

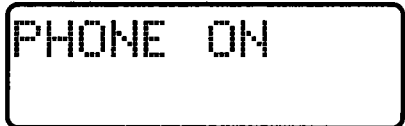

The OFF HOOK Indicator is displayed when the phone is off hook.




shows the handset volume setting.



is displayed when the unit is in a low-battery condition. The handset typically operates for at least 5 minutes after the low battery indication is given.



is displayed when the base pages the handset.

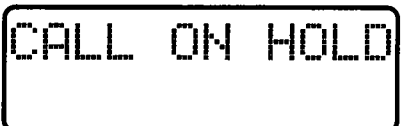

is displayed when the handset is on hold.



is displayed when the handset microphone has been muted.



is displayed when the handset ringer has been muted.



is displayed when the handset has lost communication with the base unit and is attempting to reestablish a link by scanning all channels.




is displayed if communication with the base is reestablished.




is displayed while in standby mode, if another phone is currently using the same line.

# THE HANDSET LAYOUT

## THE HANDSET FEATURES

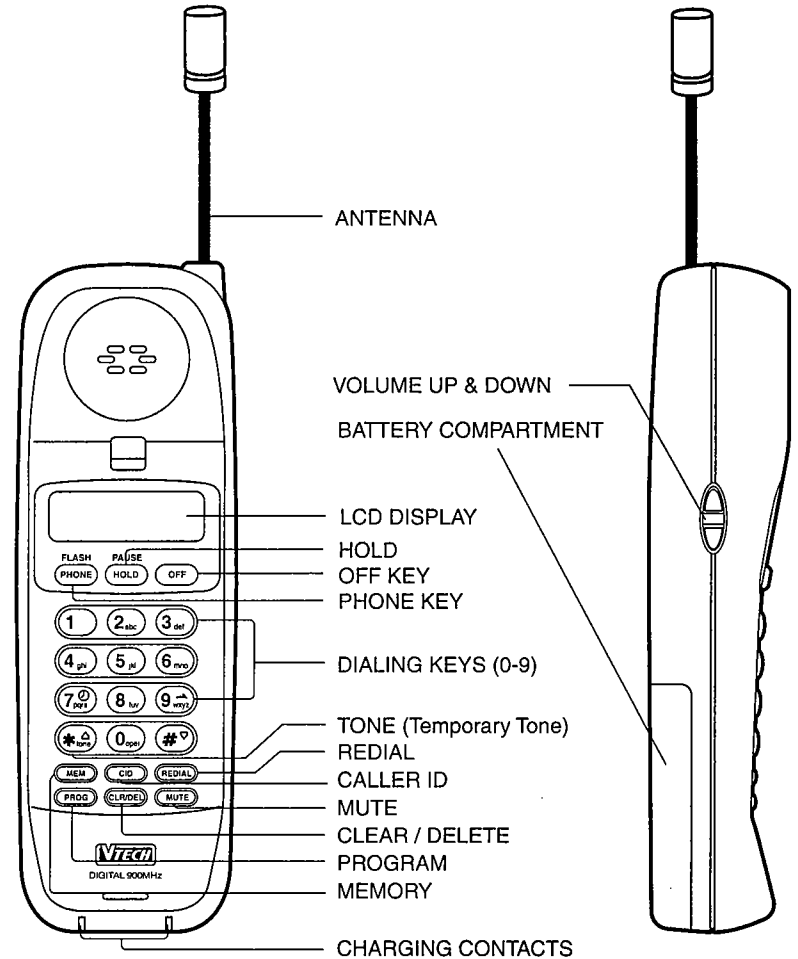

## THE BASE FEATURES

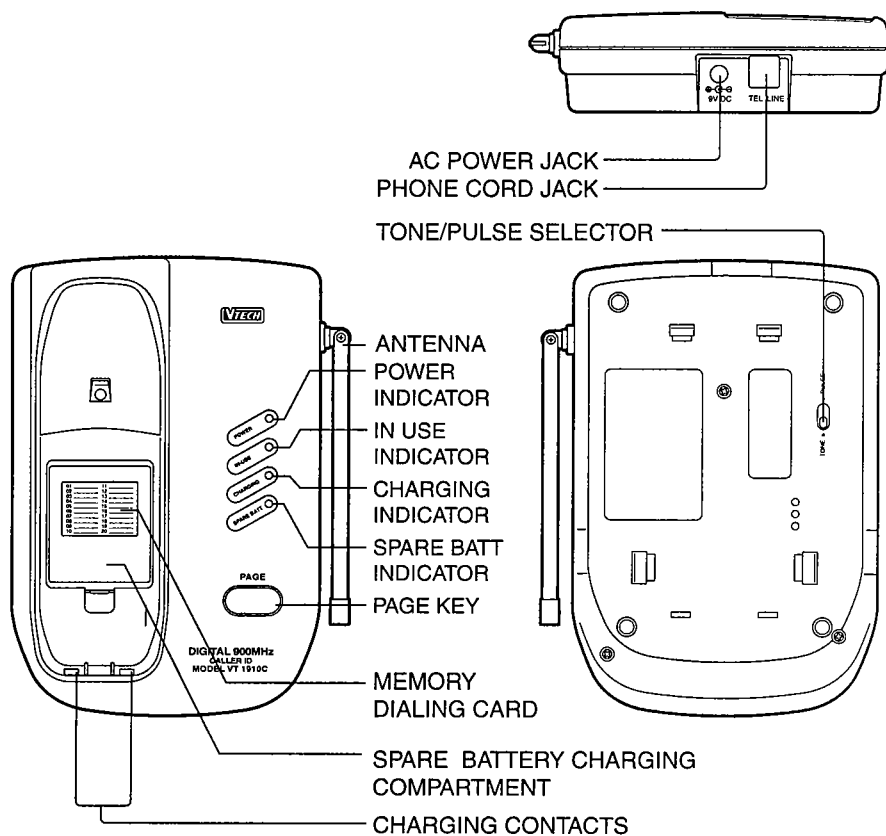

Here's a brief guide to the features and functions of your VTech VT 1910c cordless telephone:

### SET-UP

- Connect telephone line cord to base unit and telephone jack.
- Plug AC adapter into a standard electrical outlet
- Set Dial Mode switch to **PULSE** or **TONE**. The unit is factory set to **TONE**.
- Let handset battery pack charge for 16 hours before first use.

### MAKING CALLS

- Press the **PHONE** key on the handset. When the "PHONE ON" indicator is displayed and you hear a dial tone, dial the number.
- Enter the number to be dialed on the LCD and then press the **PHONE** key.

### ANSWERING CALLS

- To answer a call on the handset, press any key other than **OFF**, **MUTE**, or the Volume Keys on the handset. The handset will not auto-answer when lifted off the base cradle.

### HANGING UP

- Press **OFF** on the handset or place the handset in the base cradle to hang up a call.

### TO PLACE A CALL ON HOLD

- Press **HOLD** on the handset to place an active call on hold. Press **HOLD** again to return to the call.

### TO MUTE A CALL


- Press **MUTE** on the handset to disable the handset microphone.
- Press **MUTE** again to return to normal operation.

### TO PAGE THE HANDSET

- To page from the base, press **PAGE**.
- To cancel the **PAGE** either press **PAGE** again on the base or press **OFF** on the handset.

### STORING:

- The phone should be **OFF**.
- Enter the number you wish to store on the LCD up to a maximum of 20 digits.

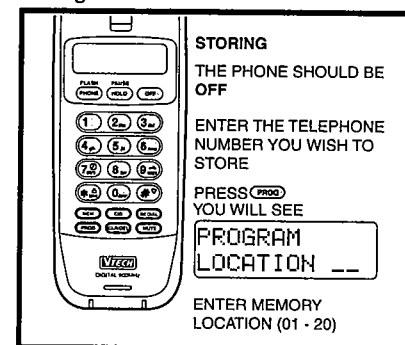


- Press **PROG**.
- Enter the two digit memory location (01 .. 20), the unit will store the number, emit a happy tone to confirm successful programming and exit program mode.

## QUICK REFERENCE GUIDE

## BASIC OPERATION

### MEMORY DIALING:

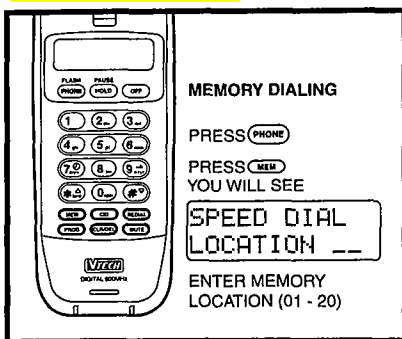

- Press the **PHONE** key.
- Press **MEM**.
- Enter the memory location of the numbers you wish to dial (01...20). The number will be displayed on the LCD and will be dialed.


### CID - CALLER ID

- To view information stored in CID memory, press **CID** on the handset.



- The display will show the most recent call received.

- To view the time and date of the call press and hold the **7** key. The time and date will be shown along with the phone number. You will see something like:

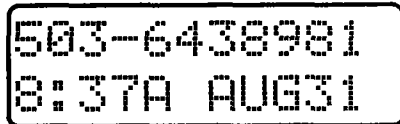

As long as the key is held down.

- To view other calls, scroll backwards and forwards by using the **Δ** (\*) and **▽** (\*) keys.
- To view additional digits not shown on the display, press the **→** (9) key
- To exit press **OFF**.

### USING REDIAL

- Press the **PHONE** key, then **REDIAL** to automatically redial out the last number you dialed.

Or

- Press **REDIAL** so that the number is shown on the display and then press the **PHONE** key.

### HOLD

- Press **HOLD** to put a call on hold.
- To return to the call, press **HOLD** key again

### MAKING CALLS

You can make calls directly from the handset whether you are at the base or away from it.

**NOTE: There are two different ways to dial a number:**

1. Press the **PHONE** key and wait for dial tone. Then dial the number you want.

Or

2. Enter the number onto the display first, then press the **PHONE** key. This will dial the number that is displayed on the LCD after 2 seconds. See "ADVANCED DIALING" on Page 22

If you make a mistake when dialing, press **OFF** to hang up, then press the **PHONE** key to get the dial tone again.

### DISCONNECTING

To end a call, either place the handset back in the base, or press **OFF** on the handset.

### OFF MODE (STANDBY)

When the unit is **OFF** the display will be clear.

### VOLUME CONTROLS

The handset has a digital volume control.

The volume controls for the handset are located on the side of the unit. Press the **▲** (up) or **▼** (down) keys to increase or decrease the volume. Holding either key down will continuously change the volume setting. The ear piece volume level indicator will change accordingly.

### FLASH

You can use your Vtech VT 1910c cordless phone with services such as Call Waiting. Instead of pressing the switch-hook (as you would on a regular phone) press the **PHONE** key.

### REDIAL

To **REDIAL** the last number you dialed, press the **PHONE** key, then press **REDIAL**. The phone will automatically dial the number. The number will be shown on the display.

### CLEARING THE DISPLAY

The display can be cleared by pressing and holding the **CLEAR/DEL** key down until the display clears.

### MUTE

- Press **MUTE** on the handset to disable the handset microphone.
- Press **MUTE** again to return to normal operation.

### RINGER MUTE

- Press **MUTE** on the handset during incoming ringing will disable the ringer for the duration of the call.

# ADVANCED FUNCTIONS


## CID WITH CALL WAITING

If during a normal phone call another call comes in with CID information, notification beeps will be heard in the handset earpiece.

The new CID information will be displayed on the LCD for 10 seconds and will then be stored in memory.

## Switching calls

- To switch over to the new call, press the phone key, the first call is put on hold.
- To switch back to the first call, press the **PHONE** key again.

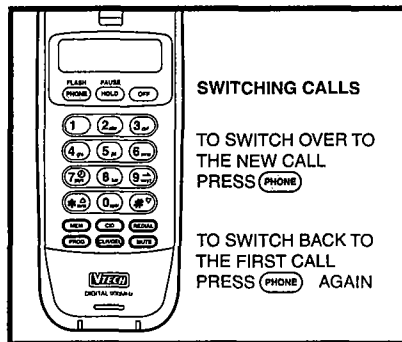


## Temporary Tone

If you have a rotary (dial-pulse) telephone service, (**TONE/PULSE** switch is set to **PULSE**), this feature allows you to enter special codes and tones to operate answering machines, use electronic banking services, calling cards, or other special services.

First, dial the call normally. Then activate the Temporary Tone feature by pressing **TONE** (the \* key). You can then press the numbers or symbols you need, and your phone will send the proper signals.

To end the call, press **OFF** or place the handset back in the base. The phone will automatically go back to rotary (dial-pulse) service.

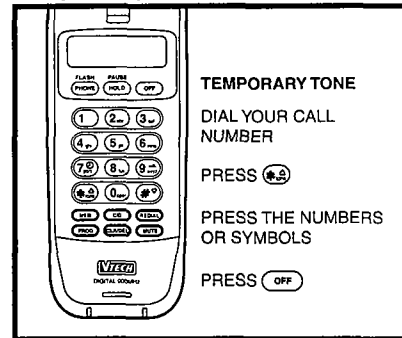


## Programming The Ringer

The handset ringer is capable of four different types of ringer tones. The following section details how to select different ringer types and how to turn off the handset ringer.

## Changing Ringer Types

To program, the handset must be **OFF**.

To select a different ringer type do the following:

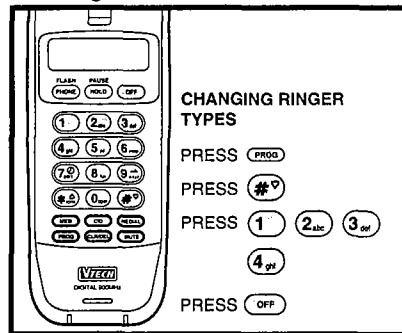

Press: **PROG**

Press: **#**

Press: 1 for ringer type 1

2 for ringer type 2

3 for ringer type 3

4 for ringer type 4

0 for ringer off (ringer disabled)

# ADVANCED FUNCTIONS


The handset LCD will show the ringer type selected:



Press **PROG** or **OFF** to exit.


## Turning Off The Ringer

To turn off the ringer do the following:

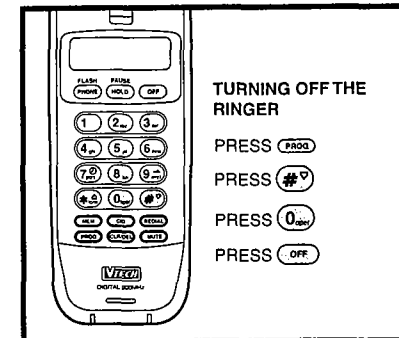

## Checking The Ringer Type

To test the present ringer type, do the following:

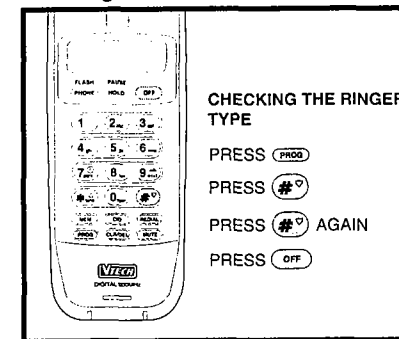

Press **PROG** or **OFF** to exit.

## CLR/DEL Key Function

The **CLEAR** and **DELETE** functions can be accessed separately depending on how long the key is held down. For example, to clear the last digit entered on the display, press the **CLR/DEL** key for less than 1 second. Press and hold the **CLR/DEL** key for more than 1 second to completely clear the LCD.

The delete function is also used to delete CID and speed dial memories, see **DELETING STORED NUMBERS** on page 24, and **DELETING NUMBERS** on page 29.

## Advanced Dialing

There are two different ways to dial a number:

- Press the **PHONE** key and wait for a dial tone. Then dial the number you want either manually, using **MEMORY (MEM)** dialing, **CID** dialing or **REDIAL**.
- Enter the number you wish to dial on the display first. Then press the **PHONE** key. This will dial the number which is displayed on the LCD after 2 seconds.

**NOTE:** The phone will dial any number which is shown on the display. If you do not want to dial the number shown on the LCD, it can be changed by:

- Press and hold **CLR/DEL** until the display is cleared, then dial normally.
- Wait for the display to clear, then press **PHONE** and enter the number you wish to dial.

## MEMORY DIALING

The VTech VT 1910c is capable of memory dialing. You can dial by pressing the memory location in which the number was stored.

If you wish to dial the number stored in a particular memory location (e.g. 15) then do the following:

1. Press the **(PHONE)** key to get a dial tone.
2. Press **(MEM)**. You will be prompted to enter a location number.
3. Enter the memory location you wish to dial. E.g. 15. The number stored at that location will be shown on the display and will automatically be dialed.

You can also review the contents of the memory locations when you are not connected to a line. When the phone is off you can scroll through the memory locations by using the **(\*)** and **(#)** keys. If you wish to dial out a number shown press the **(MEM)** key followed by the **(PHONE)** key. The phone will exit MEMORY mode and dial the number displayed. Otherwise, press **(MEM)** or **(OFF)** to exit MEMORY mode.


### Storing speed dial numbers

To program a speed dial location, do the following:

- With the phone **OFF**, enter the telephone number you wish to store. (20 Digits Maximum).
- Enter program mode by pressing **PROG**. The display will show the following:

PROGRAM  
LOCATION\_ \_ \_

- Enter the memory location (01..20) you wish to store the number in. As soon as the second memory location digit is entered, the unit will emit a happy tone (a short series of beeps) to confirm successful programming and exit program mode.

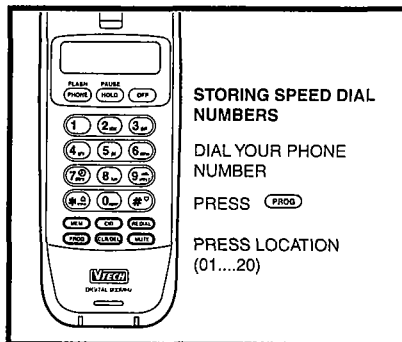

If programming is unsuccessful the unit will display:

PROGRAMMING  
INCOMPLETE

Unsuccessful programming can result from not correctly completing the programming sequence. For example, if after entering a number on the LCD and entering program mode, the **OFF** key were pressed instead of entering a valid memory location, the programming incomplete message would appear. If this message appears, simply repeat the programming sequence.

## MEMORY DIALING

### Dialing From Memory

- Press **(PHONE)** to get a line.
- Press **(MEM)**, you're prompted to enter a speed dial location number:

SPEED DIAL  
LOCATION\_ \_ \_

- Enter a 2 digit location number (01-20)
- The number stored in that location will be displayed and immediately dialed.

Or

- Beginning from standby mode, press **(MEM)** followed by a 2 digit location number (01-20).
- Press **(MEM)** again to exit mem mode and leave the number on the display.
- Note that if digits were on the display prior to entering mem mode, the contents of the speed dial memory will be appended to those digits. For example, if **1503** was on the LCD and the contents of the memory location is **6438981**, then the display would show the following upon exiting mem mode:

1503 6438981

Press **(PHONE)**, the number on the display will be dialed after a 2 second pause.

### NOTE:

The ability to temporarily add memory contents to digits already entered on the display operates in the same way for CID and speed dial memories.

In this way, long distance and area codes (for example, **1503**) can be entered on the LCD and can preface numbers recalled from CID memory before dialing. This is important because only the last 7 digits of any number are displayed when dialing from CID memory.

### Changing Stored Numbers

To change or replace a stored number simply enter the new number on the display and store it in the memory location you wish to change.

### Deleting Stored Numbers

- Press **(MEM)**. The display will change to "SPEED DIAL LOCATION\_ \_".
- Enter memory location number (01-20).
- Press **(CLEAR/DEL)** key. The display will change to "LOCATION XX DELETED".

LOCATION XX  
DELETED

- Press **(OFF)** to finish.

### NOTE:

Stored numbers are retained in memory even if the base loses its power or the handset battery is removed.

## MEMORY DIALING

### Storing Special Codes

To insert a pause in a phone number, press **(HOLD)** at the appropriate point when entering the number on the LCD. This inserts a 1.5 second pause. A "p" appears in the display to show the pause. For longer pauses, press **(HOLD)** two or more times. Each press makes the pause 1.5 seconds longer and is treated as a stored digit.

If your phone is connected to a PBX you can store the PBX access number and a pause before the phone number. For example, to store 9-PAUSE-555-1234 in memory location 08, do the following:

1. Press **9**
2. Press **(HOLD)**
3. Dial 5551234
4. Press **(PROG)**
5. Enter 08

## CID-CALLER ID

### CID - CALLER ID

Your VTech VT 1910c cordless phone has an additional feature in that it can display both the name and the number of the person calling before you answer the phone.

The unit is designed to store and display specific information provided by your local telephone company to subscribers of the "Caller Information and Identification Service" (CID). When CID service is active, your telephone company transmits to you certain information between the first and second rings of each call. This information includes the telephone number and name of the caller, as well as the date and time of the call.

This information is immediately displayed on the unit's LCD screen, enabling you to identify the calling party without having to answer the call. Simultaneously, this information is stored in memory for review at a later time.

#### NOTE:

You must be in an area where CID service is available and you must subscribe to it to use this feature.

If you do not subscribe to the CID service, the phone will still operate normally except that the CID information is not received or displayed.

### Receiving and Storing Calls

This unit receives and displays all CID information, the caller's telephone number, the caller's name and the exact date and time of the call.

The phone sequentially numbers these call records and retains them in the unit's CID memory for later review. These call record numbers are displayed as the first two digits in the display. The unit can store up to 50 numbers in its memory.

Note, once the unit's memory is full, any new call forces a deletion of the oldest call record.

### DIALING FROM CID MEMORY

#### NOTE:

It is important to note that only the last 7 digits of any number are displayed when dialing from CID memory.

For example, when you review CID memory to determine the time and date a call was received, you would see the following:

503-6438981  
8:37A AUG31

However, when you dial directly from CID memory, only the last 7 digits of the received telephone number will be used. Consequently, you would actually dial this:

6438981

## CID-CALLER ID

The VTech VT 1910c was designed to accommodate this situation. If you need to temporarily add a long distance and/or area code (such as 1503) before the CID number, do the following:

- Beginning from the standby mode, key in the necessary digits. Your display will look like this:

1503

- Then, to temporarily add the last 7 digits only from a CID memory, press **(CID)** on the handset.
- Using the  $\Delta$  (\*) and  $\nabla$  (#) keys, scroll through the received calls to locate the number you wish to dial.
- Once you have located the number you wish to dial, simply press **PHONE**. The last seven digits will be added to the numbers already in the LCD, and the whole number shown below will be automatically dialed.

1503 6438981

### Special Message Indicators Out of Area Calls

If for any reason the telephone number of the caller is unavailable, or if the caller is outside the CID service area, the message **UNAVAILABLE** is displayed on the LCD.

UNAVAILABLE

### "Private" Calls

If the caller has exercised the option to block his or her number from being sent, then the display will show **PRIVATE**.

PRIVATE

### Transmission Error

If an error is detected then the CID information is incomplete and will not be displayed. **"TRANSMISSION ERROR"** will be displayed on the LCD screen.

TRANSMISSION  
ERROR

The occasional appearance of **"TRANSMISSION ERROR"** on your display does not indicate a problem with your unit or your telephone line. However, if this appears frequently, you may want to notify your telephone company.

## CID-CALLER ID


### Reviewing Numbers

Calls stored in memory can be reviewed by pressing **(CID)**. The display will show the number of the most recent call. The top line of the display is used to indicate the memory location number and the bottom line of the display shows the name, see below:

CALL #01  
ABC COMPANY➔

There may be additional characters in the name which can not be shown on the current display. Press the  $\rightarrow$  (9) key. This will overwrite the CID memory location on the top line to show up to a maximum of 15 alpha characters for the duration of the keypress. The first 12 alpha characters will be on the top line with up to 3 additional characters on the second line.

ABC COMPANY  
LTD

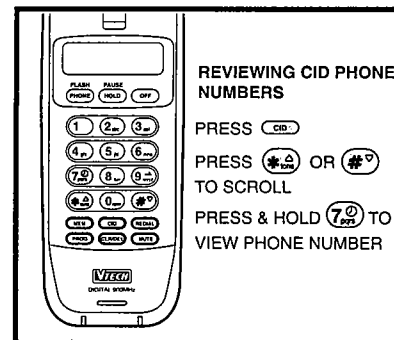

Once the view key is released, the display returns back to normal.

To find out the corresponding phone number as well as the date and time of the call, press and hold the 7  $\text{⌚}$  key. The date and time will be shown. Releasing the key will again show the caller's name.

501-6438981  
8:37A AUG31

Pressing the  $\Delta$  (\*) key displays the next lower in sequence call record. Likewise, pressing the  $\nabla$  (#) key displays the next higher in sequence call record

To save you time in reviewing call records, you can "wrap-around" the call history log. For example, if you press the  $\Delta$  (\*) key enough to scroll back to the first record, pressing it again will force the display to go to the very end of the call record.

## CID-CALLER ID

### DELETING NUMBERS

Pressing the CLR/DEL button deletes the CID number displayed.

- While the phone is in CID mode, press the **(CLR/DEL)** key once to delete the current call and the display will show:

DELETING  
SINGLE CALL

- The older CID number will be moved forward by one location .

- Press and hold the **(CLR/DEL)** key for more than 2 seconds to delete the entire contents of CID memory. The display will show the following, for a final confirmation, before the entire CID memory is erased:

DELETE ALL?  
DEL TO ALLOW

- Pressing any key other than **(CLR/DEL)** will cancel the operation. Pressing **(CLR/DEL)** will confirm the operation and the display will then show:

DELETING  
ALL CALLS

- The message will remain on the display for 2 seconds.

## SPECIAL MESSAGE INDICATION

### NOISE OR INTERFERENCE

Your VTech VT 1910c cordless telephone has auto-channel scan circuitry which will detect excess noise and change the channel of the phone to reduce it. This is done automatically.

Since the VTech VT 1910c is a fully digital phone, it does not suffer from noise associated with regular cordless phones. At times you may experience occasional "drop outs" especially at the extreme edges of the phone's range. Simply move closer to the base unit and this will disappear.

### AUTOMATIC SECURITY CODING

Your VTech VT 1910c phone is factory set with 16.8 million possible security codes. This unique security code allows your handset and base to recognize each other, and minimizes the possibility of another cordless phone using your telephone line.

### OUT OF RANGE INDICATION

If the handset is moved to a point where the base and handset can no longer communicate, the handset will make a quick series of beeps to signal Out of Range.

If the handset is active when taken out-of-range, it will beep twice a second and enter standby mode after 25 seconds if the link is not reestablished. If the handset is brought back within range, it will automatically re-link.

For out-of-range in standby mode, the handset will beep once and then at 15 second intervals, will display "CHANNEL SERACHING" on the LCD, and scan all channels in an attempt to re-link with the base.

CHANNEL  
SEARCHING

### OUT OF RANGE WHEN PHONE IS ON

If you are presently engaged in a phone conversation move closer to the base. If the base unit does not communicate with the handset within 25 seconds of losing contact, it will automatically hang up.

### OUT OF RANGE WHEN PHONE IS OFF

If the phone is **OFF**, the handset and base still monitor each other to make sure that they can communicate. If the handset is moved out of range, the handset will make a series of beeps, and will then display "CHANNEL SERACHING" on the LCD. At 15 second intervals the handset will scan all channels in an attempt to reestablish communication with the base. This process does not require user intervention; the handset will re-link with the base automatically once it is brought back within range. The unit will then be able to receive and place calls.

When the base unit is unplugged from the power supply, the handset will give the "Out of Range" warning beep. Plug the base in again and this will stop.

## MAINTENANCE

### TAKING CARE OF YOUR TELEPHONE.

Your VTech VT 1910c cordless telephone contains sophisticated electronic parts, so it must be treated with care.

#### Avoid rough treatment

Place the handset down gently. Save the original packing materials to protect your telephone if you ever need to ship it.

#### Avoid water

Your telephone can be damaged if it gets wet. Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install your base unit near a sink, bathtub or shower.

#### Electrical storms

Electrical storms can sometimes cause power surges harmful to electronic equipment.

For your own safety, use caution when using electric appliances during storms.

### Cleaning your telephone

Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a soft cloth slightly dampened with water or a mild soap. Do not use excess water or cleaning solvents of any kind.

Remember that electrical appliances can cause serious injury if used when you are wet or standing in water. If your base unit should fall into water, **DO NOT RETRIEVE IT UNTIL YOU UNPLUG THE POWER CORD AND TELEPHONE LINE CORDS FROM THE WALL.** Then pull the unit out by the unplugged cords.

## IN CASE OF DIFFICULTY

If you have difficulty operating your phone, the suggestions below should solve the problem. If you still have difficulty after trying these suggestions, call VTECH Communications at 1-800-624-5688. In Canada, call VTECH Electronics at 604-273-5131.

### THE PHONE DOESN'T WORK AT ALL.

- Make sure the Power Cord is plugged
- Make sure the telephone line cord is plugged firmly into the base unit and the telephone wall jack.
- Make sure the batteries are properly charged. If the 'LOW BATTERY' message is shown, the battery pack needs charging.

### NO DIAL TONE.

- First check all the suggestions above.
- If you still don't hear a dial tone, disconnect the base unit from the telephone jack and connect a different phone. If there is no dial tone on that phone either, the problem is in your wiring or local service. Call your local telephone company.

### YOU GET NOISE, STATIC, OR A WEAK SIGNAL EVEN WHEN YOU'RE NEAR THE BASE UNIT.

- Household appliances plugged into the same circuit as the base unit can sometimes cause interference. Try moving the appliance or the base unit to another outlet.

### YOU GET NOISE, STATIC, OR A WEAK SIGNAL WHEN YOU'RE AWAY FROM THE BASE UNIT.

- You may be out of range. Either move close to the base, or relocate the base unit.
- The layout of your home may be limiting the range. Try moving the base unit to another position.

### THE HANDSET DOES NOT RING WHEN YOU RECEIVE A CALL.

- Make sure you have the handset ringer activated. To set the ringer, see "PROGRAMMING THE RINGER" on page 21.
- Make sure the telephone line cord is plugged firmly into the base unit and the telephone jack. Make sure the power cord is plugged in.
- You may be too far from the base unit.
- You may have too many extension phones on your telephone line to allow all of them to ring. Try unplugging some of the other phones.

### YOU HEAR OTHER CALLS WHILE USING YOUR PHONE.

- Disconnect your base unit from the telephone jack, and plug in a regular telephone. If you still hear other calls, the problem is probably in your wiring or local service. Call your local telephone company.

### YOU HEAR NOISE IN THE HANDSET, AND NONE OF THE KEYS OR BUTTONS WORK.

Make sure the power cord is plugged in.

### COMMON CURE FOR ELECTRONIC EQUIPMENT

Electronics, like people, can sometimes get confused. If the unit does not seem to be responding normally, then try putting the handset in the cradle. If it does not seem to respond after trying this a few times, do the following (in the order listed):

1. Disconnect the power to the base.
2. Disconnect the handset battery.
3. Wait a few minutes.
4. Connect power to the base.
5. Connect the handset battery.
6. Put the handset in the base.

### LIMITED WARRANTY

VTECH Communications warrants, to the original purchaser only, the material and workmanship of this product for **ONE YEAR** from the date of purchase. VTECH will repair or replace, at our option, this product without charge should it fail due to a defect in material or workmanship within that time period.

This warranty does not apply to loss or damage which is the result of accident, misuse or negligence. All other warranties, expressed, implied, or statutory, including warranties of fitness for a particular purpose, are limited to the time period listed and are otherwise excluded from this warranty. VTECH may, at its option, void the warranty if unauthorized repairs are attempted. Additionally, VTECH shall not be liable for any incidental or consequential damage or commercial loss, nor for any other loss or damages.

**VTECH assumes no responsibility for products sent without prior Return Authorization.**

To arrange for service, in or out of warranty, please call our Customer Service department at 1-800-624-5688; In Canada, call VTECH Electronics at 1-800-267-7377 for Return Authorization. **For warranty service, proof of purchase is required.**

# TECHNICAL SPECIFICATIONS

## FREQUENCY CONTROL

Crystal Controlled Dual PLL Synthesizer

## TRANSMIT FREQUENCY

Handset : 925.05 MHz to 927.75 MHz  
( All ten channels within this range)

Base : 902.3 MHz to 905.0 MHz  
(All ten channels within this range)

## RECEIVE FREQUENCY

Handset : 902.3 MHz to 905.0 MHz  
( All ten channels within this range)

Base : 925.05 MHz to 927.75MHz  
( All ten channels within this range)

## NOMINAL EFFECTIVE RANGE

Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the time of use.

## SIZE

Handset : 19 x 6 x 3.5cm (L x W xT)  
Maximum (Antenna excluded)

Base : 21.5 x 14.5 x 5cm (L x W x T) Maximum (Antenna excluded)

## WEIGHT

Handset : 250 grams  
Base : 415 grams

## POWER REQUIREMENTS

Handset : Self-contained nickel-cadmium rechargeable battery supply, 3.6V nominal, 600mAh capacity.

Base: 9VDC @ 300mA


## MEMORY

Speed Dial:20 Memory locations, 20 digits per location.

CID : Alpha Numeric Display 50 Memory locations


**SPECIFICATIONS ARE TYPICAL AND MAY CHANGE WITHOUT NOTICE.**

## VT1910C Cordless Telephone

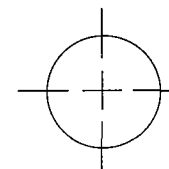

## Wall Mounting Template

Use this template when wall mounting your base unit. To mark the positions of the mounting screws, hold this template against the wall, and press a pencil or pen point through the center of each crossmark.

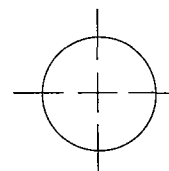

## NOTE:

Select a spot where you can screw into a wooden stud within the wall. The mounting screws will not hold securely in plaster or wallboard alone.