

MANUAL DEREGISTRATION CODE

CONNECTING			Deregistration Process:
CS6209	LS6205	DS5151-X	*331734#(MENU/SELECT)
CS6219-X	LS6215-X	DS6201	
CS6228-X	LS6225-X	DS6211-X	
CS6229-X	LS6226-X	DS6221-X	
		DS6222-X	

MANUAL DEREGISTRATION CODE

OOR or No pwr at base			Deregistration Process:
DS6301	DS6771-X	CM18X45	*331734#(MENU/SELECT) NOTE: * 2010 Models LS6245/LS6204, DS6151/DS6101, DS6251/DS6250 Press *331734# + left softkey
DS6311-X	DS664X-X		
DS6321-X	LS6325		
DS6322-X	LS6326-X		
DS6151*	LS6375-X		
DS6101*	LS642X-X		
DS642X-X	LS6475-X		
DS6671-X	IS71X1-X		
DS6672-4	SN6107		
DS6291*	DS6251-X		
DS6621-X	DS6250		

MANUAL DEREGISTRATION CODE

NO DISPLAY	Deregistration Process:
IS6100, IS6200	Remove the headset from its base and press the key sequence: VOL+, ON, VOL- , ON. VOL+, VOL-, ON. The headset LED will flash blue and orange indicating it is not registered.

MANUAL DEREGISTRATION CODE

OOR or No pwr at base	Deregistration Process:
DE Platform - CS632X-X, CS51X9, CS5158-X	<ol style="list-style-type: none">1. Press Menu/Select. Display reads: Play messages if it has a TAS or Directory if not.2. Enter *7890#. Display reads: >Test Base Test Handset3. Scroll to >Test Handset; press Menu/Select. Display reads: >SW Version.4. Scroll to >Register Clear; press Menu/Select.5. Display reads: Reg Clear ?AR on top line. Press Menu/Select.6. Display reads: OKClear ?AR on top line. Press and hold OFF until Out of range OR No pwr at base is displayed.7. Unplug battery/s; wait a few seconds, then reconnect.8. The registration instructions will appear on the display. Register the handset as you normally would.

<p>DE Platform - CS642X-X, DS65XX-XX & CS652X-X, CS662X-X, CS664X-X, CS67X9-X and CS68X9-X, TRXX-2013</p>	<ol style="list-style-type: none"> 1. Press Menu/Select. Display reads: Play messages if it has a TAS or Directory if not. 2. Enter *7890#. Display reads: >Test Base Test Handset 3. Scroll to >Test Handset; press Menu/Select. Display reads: >SW Version. 4. Scroll to >Next Page...; press Menu/Select. 5. Display reads: LCD TEST on top line. Scroll to >Register Clear, Press Menu/Select. 6. Display reads: Reg Clear? Press Menu/Select. Press and hold OFF until Out of range OR No pwr at base is displayed. 7. Unplug battery/s; wait a few seconds, then reconnect. 8. The registration instructions will appear on the display. Register the handset as you normally would.
<p>SN6167/SN6307</p>	<p>VOL+, SPK, VOL -, SPK, VOL +, VOL -, and SPK</p>

MANUAL DEREGISTRATION CODE

OOR or No pwr at base	Deregistration Process:
<p>CS69X9-X, CS6199-X, LS6181-X, LS6191-X, DS6751, DS6722-X</p>	<p>Base should not be connected to AC adapter</p> <ol style="list-style-type: none"> 1. Press Menu/Select. Display reads: Play messages if it has a TAS or Phonebook if not. 2. Enter *7890#. Display reads: Test Handset 3. Press Menu/Select. Display reads: SW VER. 4. Scroll (Volume) UP until REGSTR CLEAR, press Menu/Select. 5. Display reads: Reg Clear ? Press Menu/Select. 6. Display reads: OK and the handset will beep. Press and hold OFF until Out of range OR No pwr at base is displayed. 7. Unplug battery/s; wait a few seconds, then reconnect. 8. The registration instructions will appear on the display. Connect the AC adapter and register the handset as you normally would.

OOR or No power at base	Deregistration Process:
UP407	<ol style="list-style-type: none"><li data-bbox="892 266 1570 298">1. Press Menu/Select *7890#. (must do this quickly).<li data-bbox="892 298 1528 331">2. Scroll to REGSTR CLEAR, Press Menu/Select