Go to www.vtechphones.com to register your product for enhanced warranty support and the latest VTech product news.

Safe & Sound

Video & audio monitor



VM321

VM321-2





ம் On/off

① Zoom

LED lights

Press and hold to turn on or off.

press to zoom in or out.

Parent unit lights.

While viewing in single-CAM mode,

Indicate the different statuses of the

parent unit. For details, refer to

Congratulations

on purchasing your new VTech product. Before using this product, please read Important safety instructions.

This manual has all the feature operations and troubleshooting necessary to install and operate your new VTech product. Please review this manual thoroughly to ensure proper installation and operation of this innovative and feature rich VTech product. For support, shopping, and everything new at VTech, visit our website at

/hat's in the box

www.vtechphones.com.





 Do not mix old and new batteries. Do not mix alkaline and standard (carbon-zinc) batteries

Baby unit light

- The operating time for using AA batteries is short, only for a few hours. If you want to monitor your baby for a long time, we recommend you connect your baby unit to AC power. If the baby unit will not be used for a long time
- disconnect and remove the battery to prevent possible leakage. You can use rechargeable AA batteries for
- the baby unit, but the baby unit cannot charge rechargeable batteries.

Replace the baby unit battery To replace the battery, gently pull the ribbon

and lift up to remove the batteries, then follow the step above to install the battery.

On/off On in red when the baby unit is

unit battery is low

pairing mode.

powered by batteries.

On in green when the baby

· On in orange when the baby

unit is powered by AC power.

unit is not paired to the parent

Flashes in red when the baby

Flashes alternately in red and

green when the baby unit is in

nstall the battery

You can power up the baby unit by connecting

it to AC power or installing four AA alkaline

batteries. Even if the baby unit is connected

four AA alkaline batteries. This guarantees

into the battery compartment, matching the

Make sure the ribbon attached inside the

battery compartment is put under the batteries

and the excess ribbon is tucked in properly.

Install the battery as shown below.

polarity markings (+ and -) inside the battery

to AC power, we recommend you also install

continual operation in case of a power outage


Install four AA alkaline batteries (not supplied


Install the baby unit battery

The parent unit runs on rechargeable battery or AC power. To continuously monitor your baby, make sure you use both battery and AC power at the same time. With the battery alone, the parent unit can cordlessly run for a short time only.

Install the parent unit battery

 Use only the battery supplied with this product. Install the battery as shown below.

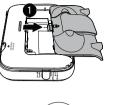

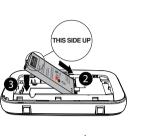



Replace the parent unit battery To replace the battery, pull out the battery compartment. Press down on the large tab

of the battery and pull it out of the battery compartment, then follow the steps above to install the battery.

· The operating time for using the rechargeable

battery is short. If you want to monitor your baby for a long time, we recommend you connect the parent unit to AC power. • If the parent unit will not be used for a long time, disconnect and remove the battery to prevent

Connect the baby monito

ØNOTES


Connect the baby unit

- · Use only the power adapters supplied with this Check for reception strength and camera angle Make sure the electrical outlets are not controlled
- before drilling the holes. by wall switches 1. Place the wall mount bracket on a wall and · The power adapters are intended to be correctly then use a pencil to mark the top and the oriented in a vertical or floor mount position. The bottom holes as shown. Remove the wall
- prongs are not designed to hold the plug in place mount bracket and drill two holes in the if they are plugged into a ceiling, under-the-table wall (7/32 inch drill bit).

Mount the baby unit

mount the baby unit on a wall.

Use the provided wall mount if you want to

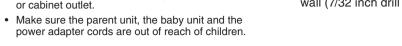





2. If you drill the holes into a stud, go to step 3.


If you drill the holes into an object other than a stud, insert the wall anchors into the holes. Tap gently on the ends with a hammer until the wall anchors are flush with the wall.

Tighten the screw in the middle hole first.

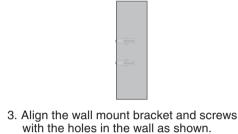


so that the wall mount bracket position is 6. You can also maximize your baby unit's fixed. You can tighten the other screw in viewing angles by tilting the lens. Hold the the top hole. top of the lid, and then tilt it up or down to Place the baby unit on the wall mount adjust to your preferred angle bracket. Tighten the screw into the threaded socket at the bottom to secure

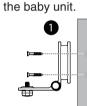

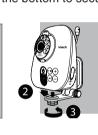

Connect the parent unit and Insert the screws into the holes and tighten charge its battery the screws until only 1/4 inch of the screws

When you have connected the parent unit and installed its battery for the first time, press $oldsymbol{\Theta}$ for 2 seconds to turn it on. The battery icon indicates the battery status (see the following

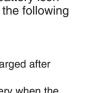

Action

AC power

when not ir

- The parent unit battery is fully charged after 12 hours of continuous charging.
- It takes longer to charge the battery when the parent unit is turned on. To shorten the charging time, turn the parent unit off while charging.
- The standby time varies depending on the sensitivity level you set, your actual use and the age of the battery.

indicators	status	Action
The battery icon is off and -== displays.	No battery is installed but operates using AC power, or the battery has been installed incorrectly.	Install the parent unit battery. Charge without interruption (at least 30 minutes).
The screen displays Battery low at Parent Unit and The Ight flashes.	The battery has very little charge and may be used for only a short time.	Charge without interruption (about 30 minutes).
The battery icon becomes solid	The battery is fully charged.	To keep the battery charged, connect it to

fore use

⊘NOTE

• This baby monitor is intended as an aid. It is not a substitute for proper adult supervision, and should not be used as such

• To avoid interference from other electronic devices, place your baby monitor far away from devices such as wireless routers, microwaves cell phones and computers

1. Place the baby unit more than 1 meter (3 feet) away from your baby.


Positioning the baby monitor

Keep the baby unit out of the reach of your baby.

Never place or mount the baby unit inside the



(3 feet) away from the baby unit.

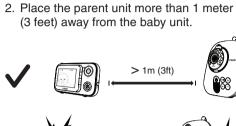

baby unit. Speak towards the microphone of the

switches to other baby units. Then, repeat

I. Make sure your baby units and parent unit

⊘NOTE

step 2.

represents the selected baby unit number), then Waiting for linking \dots and Υ , move the parent unit closer to the baby unit (observe the minimum distance of 1 meter/ 3 feet). You can also check if the baby monitor is connected to a live power socket and switched on.

baby units.

- If you experience high-pitched screeching noise from your baby monitor while positioning: Make sure your baby units and parent unit are
- more than 1 meter (3 feet) apart, OR - Turn down the volume of your parent unit.

Operating range

up to 300 meters (1.000 feet) outdoors or 50 meters (160 feet) indoors. The actual operating range may vary depending on the environmental conditions and other obstructions.

High

Power jack

volume.

Baby unit overview

Turn on or off the sound activation If the parent unit screen is turned off

Camera angle adjustment tab

Tilt to adjust camera angle.

Backup light for night vision.

Press and hold to turn on or off.

Press again to stop playing lullabies

Press to increase the listening

Light sensor

Infrared LEDs

Camera

心 On/off

Microphone

►/■ (Play/stop)

+ (Volume up)

Press to play lullabies

your baby unit detects a sound. When no sound is detected within 50 seconds, the screen will be off automatically to save power 1. Press **MENU** when the parent unit is idle.

SELECT or ▶.

· The parent unit will turn on only if the sounds

detected are from the last viewed camera

If the sound sensitivity is set to Level 5, the bab

noises may disrupt the silence and prevent the sound-activated screen feature to work properly.

one baby units in your system. The monitoring mode is preset to CAM 1. 1. Press **MENU** when the parent unit is idle.

MODE, then press SELECT or ▶.

3. Press ▼ or ▲ to choose CAM X, Split

CAM or **Patrol Mode**.

different baby units by pressing VIEW in this mode.

multiple baby unit images in a maximum

even though the scanning period is not

expired by pressing VIEW in this mode. 4. Press **SELECT** to confirm your selection.

- (Volume down)

12 **Temperature sensor**

13 Battery compartment cover

volume.


⇒ (Skip)

14 Speaker

Antenna

Press to decrease the listening

Press to skip to the next lullaby

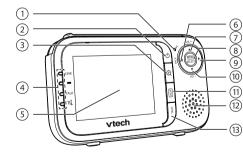

Threaded socket (1/4 in) LCD display For wall mount installation use. **⋖**/BACK While in a menu, press to return to the previous menu. While viewing in

mode, press to Parent unit overview move leftward. While viewing in multi-CAM mode, press to move left or right to highlight a desired camera. **▲/VOL+** Press to increase the speaker volume. While in a menu, press to scroll up. While viewing in [®] mode, press to move upward. MENU/SELECT move rightward.

- Press to decrease the speaker
- While viewing in ⊕ mode, press to move downward.
- During multi-CAM mode, press to enlarge a desired camera
- the baby units.
- 14 Antenna
- Press to enter the menu. While in a menu, press to choose an item, or save a setting.
- While viewing in @ mode, press to While viewing in multi-CAM mode,

press to move right or left to

highlight a desired camera.

While viewing in multi-CAM mode, press to scroll up or down to highlight a desired camera. While in a menu, press to select an

- While in a menu, press to scroll down
- While viewing in multi-CAM mode, press to scroll up or down to highlight a desired camera.
- During patrol mode or single-CAM mode, press repeatedly to view an individual camera.
- temporarily.
- Press and hold to turn off the screen, or press to turn it on.
- While viewing single-CAM mode, press and hold to talk to the
- selected baby unit. 15 | Power jack 16 Stand

1 set for VM321;

2 sets for VM321-2

- To listen to sounds transmitted from

Parent unit lights

- **LINK** On when strong signal strength is detected between the parent unit and the selected baby unit. Flashes when the parent unit cannot link to the selected baby Off when the parent unit is turned
 - On when the parent unit is connected to AC power, or the
- battery is charging. Flashes when the parent unit battery is low and needs charging Off when the parent unit battery is fully charged, or when no battery is installed. TALK • On when the parent unit is talking to the baby unit.

On when the parent unit is in

On when the speaker volume of

the selected baby unit is turned

multi-CAM mode.

°**F** or

Parent unit display icons Connection status

- Till displays when strong signa strength is detected between the baby unit and the parent
- Til or Ti displays when moderate or low signal strength is detected between the baby unit and the parent unit. T displays when the link
- between the baby unit and the parent unit is lost. Displays when the camera at the selected baby unit has
- zoomed in Displays when a lullaby is playing at the selected baby

Temperature alert

Displays when the temperature alert is set on. Real-time temperature Displays the real-time temperature detected by the baby unit in Fahrenheit (°F) or

Celcius (°C)(e.g. **57** °F or **14** °C). Sound level indicators Displays the sound level according to the scales of loudness when there is sound transmitted from the baby units. Speaker volume

level while adjusting.

CAM 2 or • Displays the number of the

CAM 1 or Current view status

CAM 3 or

CAM 4


Displays the speaker volume

baby unit that is being viewed

Displays the highlighted baby

unit when in multi-CAM mode.

when in single-CAM mode.

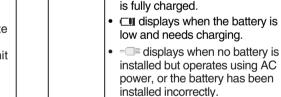

charging..

Parent unit main menu icons

battery condition:

Alert Tone

Monitorina

Sensitivity

to the parent unit.

You can select a language

used in all screen displays.

and the baby unit is lost.

(English, French or Spanish) to be

You can set the parent unit to been

the parent unit operates in low

The link between the parent unit

You can choose to monitor in CAM

there are more than one baby units

X, Split CAM or Patrol Mode if

In your system. The monitoring

With this feature, you can choose

to hear sounds from the baby unit

all the time, or to hear sounds that

exceed a certain level. You can

use the parent unit to adjust the

microphone sensitivity of your baby

unit. The higher the sensitivity level,

the more sensitive the baby unit is

in detecting sounds for transmitting

mode is preset to **CAM 1**.


animates when the battery is

displays solid when the battery



Sound-activated Screen unit screen when a baby unit is turned off. When no sound is




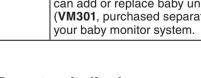

powered by batteries, the


You can turn on the temperature alert feature so unit beeps when emperature de unit falls outside



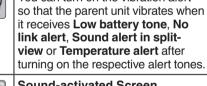




You can change the brightness of

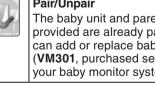

	need to be changed. It will be powered off afte 30 seconds automatica
Battery low at Parent Unit	The battery level of the parent unit is very low a needs to be recharged.
Battery empty at Parent Unit	When the battery level the parent unit is almost




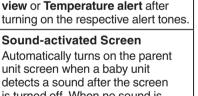



	stated baby unit batterie need to be changed. It will be powered off after 30 seconds automatical
Battery low at Parent Unit	The battery level of the parent unit is very low a needs to be recharged.
Battery empty at Parent Unit	When the battery level of the parent unit is almost depleted, it needs to be



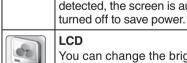


recharged. The parent

unit will be powered off

after 10 seconds.

	stated baby unit batter need to be changed. I will be powered off aft 30 seconds automatic
Battery low at Parent Unit	The battery level of the parent unit is very low needs to be recharged
Battery empty at Parent Unit	When the battery leve the parent unit is almo

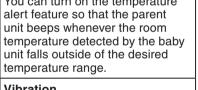






provided are already paired. You can add or replace baby units (VM301, purchased separately) to

Battery low at When the baby unit is

Powering off.

the temperature	
that the parent	
never the room	No
ected by the baby	#
e of the desired	#
ige.	
	Or

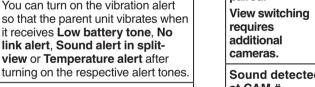

detected, the screen is automatically

the parent unit screen. Pair/Unpair The baby unit and parent unit

Parent unit display messages

The battery is empty and the parent unit is turning The selected camera slo

is not linked to the parent

You trv to view in multi

iewing in multi-CAM

maximum temperature.

selected baby unit is lost,

or the selected baby unit

is out of range, or the

selected camera slot is

The link between the

parent unit and the

aby d	No link to CAM #
 ≥rt	Only one camera paired.

are exposed

it locks into place.

Place the baby unit on the wall mount

threaded socket at the bottom to secure

the baby unit. Align the holes on the wall

mount bracket with the screws on the wall

5. The default angle of the wall mount bracket

baby unit's viewing angles by tilting the

wall mount bracket. Hold the baby unit,

and then rotate the knob in anticlockwise

direction. This will loosen the joint of the

angle. Then, rotate the knob in clockwise

direction to tighten the joint and secure the

wall mount bracket. Tilt vour baby unit

up or down to adjust to your preferred

is 90 degrees. You can maximize your

and slide the wall mount bracket down until

bracket. Tighten the screw into the

CAM mode but you have only one paired baby unit cameras. Sound detected There are sounds at CAM # detected from the selected baby unit while

Temperature The temperature detecte too low at CAM from the selected baby unit is below the set ninimum temperature The temperature detecte too high at CAM | from the selected baby unit is above the set

linking...

When you have only one paired baby unit and the link is lost, or you have multiple paired baby units and the links are lost. Waiting for linking...

displays for 10 seconds

and then the screen turns

represents the selected baby unit number.

sing the baby monitor Power on or off the baby unit

the baby unit. The \circlearrowleft light turns on. • Press and hold \odot for 2 seconds again to turn off the baby unit. The \circlearrowleft light turns off.

Press and hold for 2 seconds to turn on

 Press and hold Φ for 2 seconds to turn on the parent unit. The screen turns on. • Press and hold \odot for 2 seconds again to

Turn on or off the parent unit

still hear sound from the baby unit. Press and hold VIEW for 2 seconds to turn off the screen

Press any key to turn on the screen again

Adjust speaker volume For parent unit: You can change the speaker volume from **Volume 1** to **Volume 7**, or turn it off. The

speaker volume is preset to **Volume 4**.

When the speaker volume is set to off, X

appears briefly and the 록 light turns on.

 Press ▲/VOL+ or ▼/VOL− when the parent unit is not in use. **⊘**NOTE • In Split CAM mode, you cannot adjust the

speaker volume.

For baby unit: You can change the speaker volume from **Level 1** to **Level 5**. The preset volume is

Level 3. Changing the speaker volume also changes the lullaby playback volume. • Press + or - on the baby unit to adjust the speaker volume.

noise stops. You can also press **▼/VOL-** on the parent unit to lower or mute the noise > 1m (3ft)

Test your baby monitoı

use, and at regular times thereafter.

You may test the baby monitor before initial

· For hearing protection, make sure the parent unit is

more than 1 meter (3 feet) away from both

noise, move the parent unit further until the

baby units. If you hear any high-pitched

2. The parent unit displays images from the

baby unit. You will hear the sound at the parent unit. 3. If you have more than one baby unit, press (VIEW) on the parent unit. The screen

• When the parent unit displays No link to CAM # (#

 Increase the speaker volume of the parent unit if you cannot hear the sounds transmitted from the

Set the language You can select a language (English, French

English. Press MENU when the parent unit is idle. 2. Press ▼ or ▲ to choose Language

The screen display language is preset to

(LANGUE if French is set, or IDIOMA if

Spanish is set), then press **SELECT** or ▶. 3. Press ▼ or ▲ to choose English, Français Power on or off the parent unit or Español, then press SELECT to confirm your selection. You hear a confirmation

turn off the parent unit. The screen turns off. Adjust LCD brightness You can change the brightness of the parent unit screen from Level 1 to Level 5. The LCD

You can turn on or off the parent unit screen without powering off the parent unit. You can 1. Press **MENU** when the parent unit is idle. 2. Press ▼ or ▲ to choose LCD

brightness is preset to Level 3.

brightness, then press **SELECT** to confirm

the baby unit

BRIGHTNESS, then press **SELECT** or **▶**.

Press SELECT again to choose Brightness

4. Press ▼ or ▲ to choose the desired level of

Adjust the sound sensitivity of

You can choose to hear sounds from the baby unit all the time, or to hear sounds that exceed a certain level. You can use the parent unit to adjust the microphone sensitivity of your baby unit from **Level 1** to **Level 5**. The higher the sensitivity level, the more sensitive the baby unit is in detecting sounds for transmitting to the parent unit. The sound sensitivity level is preset to Level 3.

Sound sensitivity table for reference Sensitivity Description or Spanish) to be used in all screen displays.

Level 5

Level 4

Level 3

Level 1

you will hear all sounds (including background noises) from your baby's Medium high sensitiv

2. Press ▼ or ▲ to choose **SOUND-**The parent unit speake turns on for soft bab-

You hear a confirmation tone. baby sleeps soundly.

The parent unit speak unit will be very sensitive and detect any sounds sounds from your baby

2. Press ▼ or ▲ to choose MONITORING

1. Press **MENU** when the parent unit is idle. 2. Press ▼ or ▲ to choose **Sensitivity**, then press **SELECT** or **\rightarrow**. of four in one screen. • If you have more than one baby unit,

CAM #, then press **SELECT** or **▶**. 3. Press ▼ or ▲ to choose the desired sensitivity level, then press **SELECT** to

the baby units must be turned on.

Low




confirm your selection.


the system prompts you to choose


the desired baby unit or all baby units,

press ▼ or ▲ to choose ALL CAM or

baby's crib or playpen.

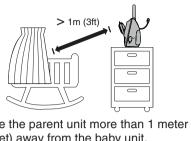

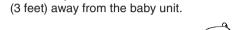

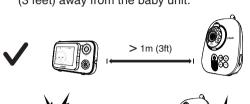

The default volume of your parent unit is level 4

The operating range of the baby monitor is interferences such as walls, doors and other

High sensitivity level

Medium sensitivity

turns on for loud

babbling and louder

It remains quiet when

your baby makes soft

Medium low sensitive

The parent unit spea

er turns on for crying

your baby. It remains

quiet when your baby

makes soft sounds.

Low sensitivity level

The parent unit speaker

turns on for loud cryind

or screeching sounds

from your baby. It

remains quiet when

sensitivity your baby makes soft

sounds.

itv level

sensitivity The parent unit speake manually, sound activation triggers the parent is constantly on, and unit screen to turn on automatically whenever

ACTIVATED SCREEN, then press

bling and louder sounds 3. Press ▼ or ▲ to choose **On** or **Off**, then from your baby. It repress SELECT to confirm your selection. mains quiet when you

including background noises. These background

Monitoring mode You can choose to monitor in CAM X, Split CAM or Patrol Mode if there are more than

> • CAM X - The parent unit only displays image of the corresponding baby unit You may change to view images from

• Split CAM - The parent unit displays

• Patrol Mode - The parent unit patrols to display images from different baby units in every 7 seconds. You may change to view images from different baby units

only one baby unit.

Monitoring mode is not applicable when there is

- from baby unit in CAM X or Patrol mode.
- you press and hold TALK. · Lullaby playback is paused when the parent unit Press

 to zoom in is talking the baby unit. Lullaby playback resumes Press ▲. ▼. ◀ or ▶ to move the zoomed when the parent unit finishes using the **TALK**

This zoom feature is not applicable in Split CAM

image upward, downward, leftward or

You can change the screen to view images from different baby units, or you can turn off the screen

To view different baby units while in CAM X: Press VIEW repeatedly to switch to the desired

baby units. The switching is in chronological order: CAM 1 to CAM 4.

To view different baby units while in Split CAM: Press VIEW to enlarge the desired baby units.

To view different baby units while in Patrol mode: Press VIEW repeatedly to switch to the desired baby units even if the scanning period on

The **Split CAM** mode resumes after a while.

a particular baby unit is not expired. The switching is in chronological order: CAM 1 to CAM 4. **⊘**NOTE

 If the switching fails, the screen displays Waiting for linking.... Make sure the baby unit turns on. Try the switching agair

You can broadcast messages from the parent

unit to any one of the baby units. 1. Press VIEW to choose a desired baby unit.

2. Press and hold TALK when the parent unit is viewing particular baby unit. Speak towards the **Microphone** on the parent unit. The TALK light is on when the voice connection to the baby unit is made. Your voice is broadcast to the baby unit Release the TALK key to stop the

broadcast. The **TALK** light goes off

rightward correspondingly Press ⊕ again to zoom out.

Set alert tone Low battery tone

You can set the parent unit to beep when the parent unit operates in low battery condition The low battery tone alert is preset to **On** 1. Press **MENU** when the parent unit is idle.

• If the speaker volume of the parent unit is set to

OFF, it will be reset to the default volume after

- 2. Press ▼ or ▲ to choose ALERT TONE, then press **SELECT** or **▶**.
- Low Battery Tone. 4. Press ▼ or ▲ to choose On or Off, then press **SELECT** to confirm your selection.
- The low battery tone alert only works while viewing that particular baby unit in single-CAM

You can set the parent unit to beep when the link

3. Press **SELECT** or ▶ again to choose

No link alert

between the parent unit and the baby unit is lost. The no link tone alert is preset to **On**

mode or in multi-CAM mode

- 1. Press **MENU** when the parent unit is idle. 2. Press ▼ or ▲ to choose ALERT TONE,
- then press **SELECT** or **▶**. 3. Press ▼ or ▲ to choose No Link Alert, then press **SELECT** or ▶.
- 4. Press ▼ or ▲ to choose On or Off, then press **SELECT** to confirm your selection.
- The no link alert only works while viewing that particular baby unit in single-CAM mode or in multi-CAM mode.

Monitor the temperature Your baby unit monitors the temperature of

your baby's room with its built-in temperature sensor. If the detected temperature is out of the preset temperature range, the parent unit will display an alert message

Set temperature range

alert range. The minimum temperature can be set between 52 °F (11 °C) and 69 °F (20 °C). The minimum temperature is preset to 57 °F The maximum temperature can be set

between **70** °F (21 °C) and **86** °F (30 °C). The maximum temperature is preset to 85 °F

- then press **SELECT** or **\rightarrow**. Press ▼ or ▲ to choose Minimum of

▼ or ▲ to choose ALL CAM or CAM #,

- Maximum, then press SELECT or ▶ If you have more than one baby unit. the system prompts you to choose the desired baby unit or all baby units, press
- then press **SELECT** or **▶**. 4. Press ▼ or ▲ to choose the desired
- minimum or maximum temperature, then press **SELECT** to confirm your selection. Temperature alert tone

You can turn on the temperature alert tone

so that the parent unit will emit an alert tone if the detected temperature is out of range. The temperature alert is preset to **Off** 1. Press **MENU** when the parent unit is idle.

2. Press ▼ or ▲ to choose TEMPERATURE,

desired baby unit or all baby units,

- then press **SELECT** or ▶. 3. Press ▼ or ▲ to choose Alert, then press
- SELECT or ▶. If you have more than one baby unit, the system prompts you to choose the
- press ▼ or ▲ to choose ALL CAM or **CAM** #, then press **SELECT** or ▶. 4. Press ▼ or ▲ to choose **On** or **Off**, then press **SELECT** to confirm your selection.
- The temperature alert only works while viewing that particular baby unit in single-CAM mode or in

You can set the desired room temperature You can choose to display the temperature in Fahrenheit (°F) or Celcius (°C). The temperature scale is preset to Fahrenheit (°F)

1. Press **MENU** when the parent unit is idle 2. Press ▼ or ▲ to choose TEMPERATURE, then press **SELECT** or **▶**. 3. Press ▼ or ▲ to choose Format, then press

- SELECT or . 1. Press **MENU** when the parent unit is idle 2 Press ▼ or ▲ to choose TEMPERATURE
 - Press ▼ or ▲ to choose Fahrenheit of Celsius, then press SELECT to confirm your selection.
 - Vibration

Temperature format

You can set the parent unit to vibrate once whenever there is any sound detected from the baby units after 20 seconds of silence. The vibration setting is preset to **On if** speaker is off. 1. Press **MENU** when the parent unit is idle.

- 2. Press ▼ or ▲ to choose VIBRATION, then press **SELECT** or **\rightarrow**.
- 3. Press ▼ or ▲ to choose On if speaker is off, Always on or Off. • On if speaker is off - The parent unit vibrates once whenever the baby units
- while the speaker of the parent unit is turned off. • Always on - The parent unit vibrates once whenever the baby units detect sounds after 20 seconds of silence.

detect sounds after 20 seconds of silence

- Off The parent unit will not vibrate even if the baby units detect sounds. 4. Press **SELECT** to confirm your selection.
- If you set the sensitivity level to Level 5 (Maximum), the baby unit will be very sensitive and detect any sounds including background silence and prevent the vibration feature to work
- If you set the vibration setting to On if speaker off or Always on, the parent unit will vibrate once when you turn the speaker off.

Play Iullabies

There are 5 lullabies to choose from, and the chosen lullaby plays repeatedly. The total duration of lullaby playback is about 20 minutes and it starts from where you stopped

 Avoid putting it near heating appliances and devices To play lullabies: DO NOT expose it to direct sunlight or moisture. Press ►/■ on the baby unit.

 Avoid dropping the product or treating it roughly. · Clean with a soft cloth. To skip to the next lullaby: Press > to skip to the next lullaby.

• DO NOT immerse the parent unit and the baby unit in water and do not clean them under the tap. DO NOT use cleaning spray or liquid cleaners. To stop playing lullables:

follow these guidelines

Make sure the baby unit and parent unit are dry Press ►/■ on the baby unit to stop. before you connect them to the mains again.

 Lullaby playback is paused when the parent unit is talking to the baby unit. Lullaby playback resumes when the parent unit finishes using the TALK feature.

The baby unit has infrared LEDs that allow

you to see your baby clearly at night or in a

dark room. When the baby unit being viewe

switched on automatically. The images from

· It is normal if you see a short white glare on your

• When the infrared LEDs are on, the image is in

black and white. This is normal due to externa

interfering factors, like lightings, objects, colors

and backgrounds, the display resolution may var

Adjust the baby unit's angle or place the baby unit

at a higher level to prevent glare and blurry display

• Depending on the surroundings and other

Add new baby unit (VM301)

The baby units and parent unit provided are

units (VM301 purchased separately) to your

For more details, refer to the user's manual

that comes with your **VM301** new baby unit

already paired. You can add or replace any baby

video and audio monitor system. You can pair a

maximum of four baby units to your parent unit.

parent unit screen as the baby unit is adapting to

this baby unit is in black and white.

the dark environment

light sources.

detects low light levels, the infrared LEDs are

some time, remove the rechargeable battery from the parent unit. Store the parent unit, the baby unit and the adapters in a cool and dry place.

When you are not going to use the baby monitor for

neral product care

To keep this product working well and looking good,

that generate electrical noise (for example, motors or

Below are the questions most frequently asked about the baby monitor. If you cannot find the answer to you question, visit our website at www.vtechphones.com or contact 1 (800) 595-9511 for customer service. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377 My video and | Make sure the baby units.

audio monitor | parent unit and the batteries are work at all. or optimum daily performance charge the parent unit when it is Make sure the power adapters are

I securely plugged into the outlet not controlled by a wall switch. Make sure the adapter cords are plugged firmly into the baby unit nd parent unit. Make sure the baby units and the I parent unit are turned on.

The parent unit may be too far away from the baby units. Move the parent unit closer to the bab its (but not less than 3 feet) Unplug the electrical power to the baby units and parent unit. Wait 5 seconds, then plug it back in Turn on the baby units and the for the baby units and the parent unit to synchronize. Install the correct type of batteries

in the baby units and follow the proper polarity orientation between inside the battery compartment. Charge the battery in the parent unit for up to 12 hours. If the parent unit battery is

parent unit before it can be used or a short time. Remove the battery and then I install it again. If that still does not work, it may be necessary to purchase new batteries.

up to 30 minutes to charge the

Large obstructions may impact the reception. Try to relocate the baby units, away from large obstruction such as walls and doors.

cordiess telephones. The parent unit may be too close to the baby units. Make sure the parent unit and the baby units are at least 3 feet away from one You may be too close to the baby init when you press and hold TALK. Make sure the parent un and the baby units are at least 3 feet away from one another.

The parent

not play any

from the

baby unit.

You may have set the sensitivity level too high. You may need to adjust the sensitivity level to a lowe evel to avoid audio feedback. You may have set the sensitivity The parent level to Level 5 (Maximum). If yo any sounds do so, the baby unit will transmit any sounds detected to the parent unit. You may need to adjust the sensitivity level to a lower level You may need to adjust the speaker volume on the parent un

My video and | Other electronic products may

audio monitor | cause interference with your

work at all.

and audio

high-pitched

rom the

I think it is

too noisy.

video and audio monitor.

nstalling your video and audio

monitor as far away from these

electronic devices as possible

telephones, intercoms, room

wireless routers, radios, cellular

nonitors, televisions, persona

computers, kitchen appliances an

The parent Make sure the parent unit is unit does powered up by connecting it to not play any AC power or to the rechargeable sound wher battery provided. there is noise baby unit.

If the parent unit is powered by the rovided battery, make sure there is sufficient charge. Charge the battery in the parent unit for up to You may have set the sensitivity I level to a very low level. If you d sounds that is too soft or light. You may need to adjust the sensitivi vel to a higher level. Large obstructions may impact the reception. Try to relocate the baby unit, away from large obstructions such as walls and doors. Remove the battery and then install it again. Turn on the baby unit and the parent unit. Allow up to one minute for the parent un and the baby unit to synchronize Other electronic products ma ause interference with you video and audio monitor. Tr nstalling your video and audio monitor as far away from these l electronic devices as possible wireless routers, radios, cellula telephones, intercoms, room monitors, televisions, personal computers, kitchen appliances and rdless telephones Charge the battery in the parent Battery low unit for up to 12 hours. Unit and < display on Remove the battery and then the parent install it again. Use it until fully parent unit for up to 12 hours.

on and the speaker volume is not there is noise | Make sure the parent unit is not unit or the onitoring in multi-CAM mode. The parent unit may be too far I away from the baby unit. Move the parent unit closer to the baby unit (but not less than 3 feet).

Make sure the parent unit is turned

battery does

baby units by turning them off and unplugging the electrical power to

If the above measures do not correct the problem, replace the

Make sure the battery is installed in the parent unit battery compartment correctly. The light on the parent unit should be on when charging.

o The Iight on the parent not accept charge. f the battery is completely epleted, it may take up to 30 ninutes to charge the parent un pefore it can be used for a short Purchase a new battery. Refer to Install the parent unit battery and Charge the parent unit he 💳 light | Make sure the parent unit battery on the parent | is installed and charged correctly unit is off. e **I** light is off when the attery is fully charged even if it is Iso powered by AC power Move the parent unit closer to the paby units (but not less than 3 and is not

The battery

does not

eet). The baby units may be ou of range. If the parent unit is powered by the rovided battery, it may not have for the parent unit to perform normally. Charge the battery in the parent unit for up to Reset the parent unit and the

the parent unit and the baby units

elephones, intercoms, room

ordless telephones.

monitors, televisions, personal

computers, kitchen appliances and

Remove the battery and then

nstall it again, then charge for up

f the battery icon and the

n the parent unit are not on, ref

Wait for 15 seconds and plug them possible: wireless routers, radios, back in again. Turn on the parent unit and the baby units. Allow up cellular telephones, intercoms, computers, kitchen appliances and o one minute for the parent uni and the baby units to synchroniz If the video and audio monitor is Other electronic products may not responding normally, try the cause interference with your cure for video and audio monitor. Tr nstalling your video and audio monitor as far away from these electronic devices as possible wireless routers, radios, cellular

> batteries again. Wait a few minutes before connecting power back to the baby units and the parent unit.

Then install the

I. Turn on the baby units and the parent unit. synchronize with the baby

Wait for the parent unit to units. Allow up to one minu for this to take place.

and openings in the back or bottom of this product are provided for ventilation. To protect

7. Never push objects of any kind into this product through the slots because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the

- 18. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the product other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reas can cause electric shock when the product is subsequently used.
- time you turn on the units or move one of the 20. Periodically examine all components for

21. Be aware of possible loss of privacy while using

public airwaves. Conversations may be picked

9. You should test the sound reception every

- up by other nursery monitors, cordless phones, scanners, etc. 22. Children should be supervised to ensure that they do not play with the product.
- sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concer

SAVE THESE INSTRUCTIONS

Use and store the product at a temperature between 32°F and 104°F

- Do not expose the product to extreme cold, heat or direct sunlight. Do not put the product close to a heating source. Batteries should not be exposed to excessive heat such as bright sunshine or fire.
- Make sure the baby unit(s) and the adapte ord(s) are always out of reach of the baby, at least 3 feet away from the baby or crib, to avoid a possible strangulation hazard. Never place the baby unit(s) inside the baby's crib

or playpen. Never cover the baby unit(s) or parent

unit with anything such as a towel or a blanket.

Other electronic products may cause interference with your baby monitor. Try installing your baby monitor as far away from these electronic devices as possible wireless routers, radios, cellular telephones,

RBRC® and 1 (800) 8 BATTERY® are intercoms, room monitors, televisions, Rechargeable Battery Recycling personal computers, kitchen appliances and cordless telephones.

Precautions for users of implanted cardiac Cardiac pacemakers (applies only to digital cordless

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless devices and implanted cardia pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that: Pacemaker patients

from the pacemaker.

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons

Electromagnetic fields (EMF) This VTech product complies with all standards regarding electromagnetic fields (EMF). If handled

23. The product is not intended for use by persons properly and according to the instructions in this (including children) with reduced physical user's manual, the product is safe to be used based on scientific evidence available today use of the appliance by a person responsible fo e RBRC® seal

The RBRC® seal on the lithium-ion battery indicates

that VTech Communications, Inc. is voluntarily participating in an industry program to collect and ecycle these batteries at the end of their use lives, when taken out of service within the United States and Canada. The RBRC® program provides a convenient

alternative to placing used lithium-ion batteries into

battery recycling and disposal bans/restrictions in

and conserving natural resources.

your area. VTech's involvement in this program is

rt of its commitment to protecting our environment

the trash or municipal waste, which may be illegal in VTech's participation in RBRC® makes it easy for you to drop off the spent battery at local retailers articipating in the RBRC® program or at authorized ech product service centers. Please call 1 (800) 8 BATTERY® for information on Li-ion

> This Class B digital apparatus complies with CAN ICES-3 (B)/NMB-3(B)

This device complies with Industry Canada licenceexempt RSS standard(s).

(1) this device may not cause harmful interference. and (2) this device must accept any interference including interference that may cause undesired

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.

FCC and IC regulations

NOTE: This equipment has been tested and found to comply with the requirements for a Class B digita levice under Part 15 of the Federal Communications mission (FCC) rules. These requirements are intended to provide reasonable protection against armful interference in a residential installation. This equipment generates, uses and can radiate radio Should keep wireless devices at least six inches frequency energy and, if not installed and used in accordance with the instructions, may cause harmful terference to radio communications. However, Should NOT place wireless devices directly over there is no guarantee that interference will not occu the pacemaker, such as in a breast pocket, when in a particular installation. If this equipment does

- ry to correct the interference by one or more of the following measures: · Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

 Consult the dealer or an experienced radio/TV technician for help. **WARNING:** Changes or modifications to this

(1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause ndesired operation.

criteria for the amount of radio frequency energy parent unit shall be held at least 1 in (2.5 cm) from

Industry Canada

Increase the separation between the equipment

equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment This device complies with Part 15 of the FCC rules

To ensure safety of users, the FCC has established that can be safely absorbed by a user or bystand according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The baby unit shall be installed and used such that parts of all persons' body are maintained at a distance of approximately 8 in (20 cm) or more. The transmitter and antenna of the

Operation is subject to the following two conditions:

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to

ciense, and Economic Development Canada technical specifications.

his product meets the applicable Innovation

RF radiation exposure statement The baby unit complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The baby unit should be installed and pperated with a minimum distance of 8 in (20 cm FCC RF exposure guidelines. This transmitter mus not be co-located or operating in conjunction with any other antenna or transmitter. This equipment Humans to RF Fields.

fornia Energy Comm

This baby monitor meets the California Energy mmission (CEC) regulations for energy consumption. Your baby monitor is set up to comply with the energy-conserving standards right out of Follow the instructions to install and charge the

battery. The CEC battery charging testing mode is ctivated while charging. Even if the parent unit is paired to baby units, the CEC battery charging testing mode is activated while it is powered off and charging.

or cETL compliance on Mesures de sécurité importantes

Lorsque vous utilisez votre appareil, vous devriez toujours suivre certaines mesures de précaution de base afin de réduire les risques d'incendie d'électrocution et de blessures corporelles, dont 1. Observez toutes les instructions et mises en

- garde inscrites sur l'appareil. L'installation par un adulte est requise. 3. Ce produit a été concu pour être un dispositif
- d'une supervision responsable et adéquate par un adulte et ne devrait pas être utilisé comme 4. Ce produit n'est pas conçu pour être utilisé en tant que moniteur médical. 5. N'utilisez pas cet appareil près de l'eau ni de

d'appoint seulement. Il n'est pas le remplacement

toute autre source d'humidité, par exemple, près

d'une baignoire, cuve à lessive, évier de cuisine,

dans un sous-sol humide ni près d'une piscine,

dans un soussol humide ou une douche.

6. MISE EN GARDE: Il peut v avoir un risque d'explosion si vous utilisez le mauvais type de piles pour l'unité du parent. N'utilisez que le bloc-piles rechargeable inclus ou le bloc-piles de rechange (BT298555). N'incinérez pas les piles. Celles-ci risqueraient d'exploser. Jetez les piles

usées selon les renseignements suivant le sceau N'utilisez que les adaptateurs inclus avec ce roduit. L'utilisation d'un adaptateur dont la

d'endommager sérieusement le produit et mettre votre sécurité en péri Adaptateur de l'unité du bébé ortie: 6V CC 800mA between the baby unit and all persons' body. Use of Adaptateur de l'unité du parent : other accessories may not ensure compliance with Sortie: 6V CC 800mA Lorsqu'ils sont branchés dans une prise de courant, les adaptateurs secteur ont été concus mplies also with Industry Canada RSS-102 with respect to Canada's Health Code 6 for Exposure of

11. Ne coupez pas les cordons d'alimentation pour remplacer les fiches, car ceci peut présenter un danger potentiel.

le cordon d'alimentation ou de le piétiner. 13. Ne faites fonctionner cet appareil qu'avec le type d'alimentation indiqué sur l'étiquette. Si votre marchand ou votre compagnie locale

murales ni les rallonges électriques. 15. Ne placez pas cet appareil sur un chariot, meuble, trépied, support de montage ni table

chancelants.

dans ce produit.

pour être orientés correctement, soit à la verticale ou au plancher. Les broches n'ont pas été concues pour supporter le poids du bloc d'alimentation et le maintenir en place si celuic

polarité ou la tension serait inadéquate risque

est branché dans une prise au plafond, sous une table ou dans un meuble. Débranchez ce produit de la prise de courant avant de procéder au nettovage. N'utilisez pas de

nettoyants en aérosols. Utilisez un chiffon humide pour le nettoyer. . Débranchez les cordons d'alimentation avant de remplacer le bloc-piles.

Ne laissez aucun obiet reposer ni appuver sur le cordon d'alimentation. N'installez pas cet appareil dans un endroit où l'on risque d'écraser vous ne connaissez pas le type d'alimentation

Ne surchargez pas les prises de courant

 Les trous et ouvertures du boîtier, situés à l'arrière de l'appareil ou sous celui-ci, servent à aérer l'appareil. Pour l'empêcher de surchauffer, ne bloquez sous aucun prétexte ces ouvertures et n'empêchez pas l'aération adéquate de 'appareil en le plaçant sur un lit, divan, tapis ou toute autre surface similaire. De même, ne le positionnez pas à proximité ni au-dessus d'une source de chaleur ou d'un calorifère. De plus ne placez pas l'appareil dans un endroit avant de vous assurer qu'il y ait une bonne circulatior 17. N'enfoncez jamais d'objets à travers les

ouvertures de cet appareil, car ils pourraien

dangereux ou causer des courts-circuits qui

18. Afin de réduire les risques d'électrocution, ne

entrer en contact avec des points de tension

peuvent dégénérer en incendies ou en risque

démontez pas cet appareil, mais apportez-le

du boîtier ou le retrait de toutes pièces que

autorisé à certaines portes ou ouvertures,

dans un centre de service autorisé. L'ouverture

contient cet appareil, à l'exception de l'accès

d'électrocution. Ne renversez jamais de liquide

risque de vous exposer à des points de tension dangereux ou d'autres dangers. Un remontage incorrect peut par la suite présenter des risques d'électrocution 19. Vous devriez tester la réception chaque fois que

vous mettez l'appareil en fonction. 20. Examinez les composantes afin de vérifier si celles-ci ne sont pas endommagées. 21. Soyez avisé de la perte de la confidentialité lorsque vous utilisez les ondes publiques. Les

d'autres moniteurs de bébé, des téléphones sans fil, des scanneurs, etc. 22. Les enfants devraient être supervisés afin de vous assurer qu'ils ne jouent pas avec l'appareil 23. Le produit n'est pas conçu pour être utilisé par des personnes (incluant des enfants) aux capacités physiques, sensorielles ou mentales réduites ou qui manquent d'expérience et de

issances, à moins qu'on leur ait donné

suffisamment de supervision ou d'instructions

relativement à l'utilisation de l'appareil par une

conversations peuvent être entendues par

personne responsable de leur sécurité CONSERVEZ CES INSTRUCTIONS

4. Assurez-vous que le moniteur et le cordon

tel une serviette ou une couverture.

Mises en garde

Utilisez et entreposez le produit à une température entre 0° C (32°F) et 40°C (104°F). N'exposez pas cet appareil à des froids ou des chaleurs extrêmes, ainsi qu'à la lumière directe du soleil. Ne l'installez pas près d'une source de 3. Le bloc-piles ne doit pas être exposé à la chaleur excessive telle que la lumière du soleil

de l'adaptateur sont toujours hors de portée des enfants, à au moins 1 mètre (3 pieds) de l'enfant ou du berceau, pour éviter tout risque de Ne jamais placer le moniteur à l'intérieur du berceau ou du parc de bébé. Ne jamais couvrir le moniteur ou l'unité (s) portative avec un article

D'autres équipements électroniques peuvent produire des interférences sur votre moniteur vidéo et audio. Tentez d'installer votre moniteur vidéo ou audio à l'écart des appareils électroniques tels que des routeurs sans fil radios, téléphones cellulaires, interphones moniteurs, téléphones, ordinateurs personnels, électroménagers et téléphones sans fil. Stimulateurs cardiaques implantés dans

Les simulateurs cardiaques (ne s'applique qu'aux

L'organisme 'Wireless Technology Research, LLC

NTR)', une firme de recherche indépendante,

interférences entre les téléphones sans fil portatifs

aliments et drogues (FDA) des Etats-Unis, la firme

à mené une évaluation pluridisciplinaire des

et les stimulateurs cardiaques implantés dans

organisme. Appuyée par l'Administration des

dispositifs numériques sans fil) :

WTR recommande aux médecins:

Vous devriez maintenir les dispositifs sans fil à au moins six pouces du simulateur cardiaque Ils ne doivent PAS placer le téléphone sans fil

dans une poche de chemise, lorsque celui-ci est L'étude effectuée par l'organisme WRS n'a pas identifié de risque pour les détenteurs de simulateurs cardiaques causés par les gens qui utilisent

Avis aux détenteurs de stimulateurs cardiaques

dispositifs sans fil à proximité de ceux-ci. Champs électromagnétiques (EMF

Ce produit de VTech est conforme à toutes s normes se rapportant aux champ électromagnétiques (EMF) standard. Si vous le manipulez correctement en suivant les instructions de ce guide, son utilisation sera sécuritaire pendan de nombreuses années, selon les meilleures évidences scientifiques dont nous disposons

ted warrant

The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories yided in the sales package ("Product") are free from defects in material and workmanship. pursuant to the following terms and conditions with the Product operating instructions. This limited urchased and used in the United States of America

What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective During the limited warranty period, VTech's

authorized service representative will repair or replace at VTech's option, without charge a Materially Defective Product. If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

or ONE (1) YEAR from the date of purchase. If

Tech repairs or replaces a Materially Defective

Product under the terms of this limited warranty

this limited warranty also applies to the repaired

r replacement Product for a period of either (a)

90 days from the date the repaired or replacemen

How long is the limited warranty period? The limited warranty period for the Product extends

on the original one-year warranty; whichever is What is not covered by this limited warranty?

Product is shipped to you or (b) the time remaining

accident, shipping or other physical damage improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion: or

1. Product that has been subjected to misuse.

3. Product to the extent that the problem experienced is caused by signal conditions, network reliability, or cable or antenna systems; or 4. Product to the extent that the problem is caused by use with non-VTech accessories; or

6. Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutiona urposes (including but not limited to Products

8. Charges for installation or set up, adjustment of customer controls, and installation or repair of systems outside the unit.

call 1 (800) 595-9511. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377. NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features may save you a service call. Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery of handling charges incurred in the transport of the Product(s) to the service location. VTech will retur repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for

What must you return with the Product to get warranty service?

or difficulty; and

and the date of purchase or receipt; and 3. Provide your name, complete and correct mailing address, and telephone number. This limited warranty does not cover

The battery

does not

charge in

unit or the

parent unit

not accep

charge.

battery does

all other written or oral communications related to this Product. VTech provides no other warranties for this 2. Product that has been damaged due to repair Product. The warranty exclusively describes all of alteration or modification by anyone other than an authorized service representative of VTech; or

5. Product whose warranty/quality stickers, product serial number plates or electronic serial numbers have been removed, altered or rendered illegible;

ised for rental purposes); or 7. Product returned without a valid proof of purchase;

To obtain warranty service in the USA, please visit our website at www.vtechphones.com or

mage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty. VTech will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered by this limited warranty

 Return the entire original package and contents including the Product to the VTech service

location along with a description of the malfunction

Other limitations This warranty is the complete and exclusive

agreement between you and VTech. It supersedes

2. Include a "valid proof of purchase" (sales receipt)

dentifying the Product purchased (Product model)

VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized o make modifications to this limited warranty and you should not rely on any such modification. State/Provincial Law Rights: This warranty gives you

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase Some states/provinces do not allow limitations or how long an implied warranty lasts, so the above mitation may not apply to you. In no event shall VTech be liable for any indirect, special, incidental, nsequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the Product or other associated equipment, the cos of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states provinces do not allow the exclusion or limitation o incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Frequency Crystal controlled PLL synthesizer

Baby unit: 2402 - 2478.5 MHz frequency Parent unit: 2402 - 2478.5 MHz 2.8" Color LCD

effective range

vary according to environmenta conditions at the time of use. Baby unit: 4 x AA alkaline batteries requirements Parent unit: 3.7V Li-polymer battery Baby unit power adapter Output: 6V DC @ 800mA Parent unit power adapter Output: 6V DC @ 800mA

precautions should always be followed to reduce the Reset the parent unit and the baby unit by turning them off and

risk of fire, electric shock and injury, including the

When using your equipment, basic safety

a wet basement or shower.

Incorrect adapter polarity or voltage can seriously damage the product.

video and audio monitor as far away Use a damp cloth for cleaning.

> hazardous situation 12. Do not allow anything to rest on the power cords be walked on or crimped

power company. 14. Do not overload wall outlets or use an extension

Specifications are subject to change without notice.

Adult setup is required

do not use it next to a bath tub, wash bowl, kitchen sink, laundry tub or swimming pool, or in **CAUTION:** Use only the batteries indicated in this manual. There may be a risk of explosion

8. The power adapters are intended to be correct

Unplug the power cords before replacing 11. Do not cut off the power adapters to replace

them with other plugs, as this causes a

shelf, stand or other unstable surfaces.

(QVGA 320x240 pixel)

and IC. Actual operating range may specific legal rights, and you may also have other rights, which vary from state to state or province to

Nominal Maximum power allowed by FCC

Please retain your original sales receipt as proof

unplugging the electrical power to e parent unit and the baby unit Wait for 15 seconds and plug their back in again. Turn on the baby unit and the parent unit. Allow up to or

Move the parent unit closer to

of range.

unit and the

is lost every

then, and I'n

interruptions

parent unit

now and

the baby unit (but not less than

Other electronic products may cause

video and audio monitor as far away

interference with your video and

from these electronic devices as

possible: wireless routers, radios.

ellular telephones, intercoms,

computers, kitchen appliances and

Move the parent unit closer to the

Reset the parent unit and the

baby unit by turning them off and

unplugging the electrical power to the parent unit and the baby unit.

back in again. Turn on the baby unit

and the parent unit. Allow up to on

minute for the parent unit and the

Other electronic products may caus

interference with your video and

from these electronic devices as

owing (in the order listed)

. Disconnect the power to the

2. Remove the batteries in the

baby units and the parent un

audio monitor. Try installing you

baby unit to synchronize.

rdless telephones.

Wait for 15 seconds and plug their

baby unit (but not less than 3 feet

he baby units may be out of range

audio monitor. Try installing you

The baby units may be our

minute for the parent unit and the

supervision and should not be used as such. 4. This product is not intended for use as a medica

room monitors, televisions, personal

e parent unit. Do not dispose of batteries in a fire. They may explode. Dispose of used batter according to the information in The RBRC® sea

9. Unplug this product from the wall outlet before

Do not install this product where the cords may 13. This product should be operated only from the type of power source indicated on the marking baby units and the parent unit label. If you are not sure of the type of power

where proper ventilation is not provided. Slots

them from overheating, these openings must

All rights reserved. 05/16. VM321-X_CIB_V4.0 ocument order number: 91-006751-050-100

1. Follow all warnings and instructions marked on

This product is intended as an aid. It is not a substitute for responsible and proper adult

5. Do not use this product near water. For example

if a wrong type of battery is used for the paren unit. Use only the supplied rechargeable batter or replacement battery pack (BT298555) for


ing. Do not use liquid or aerosol cleaners.

supply in your home, consult your dealer or local

15. Do not place this product on an unstable table 16 This product should not be placed in any area

not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator of

© 2016 for VTech Communications, Inc.

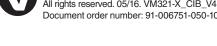

Use only the adapters included with this produc Baby unit power adapter: Output: 6V DC 800m/ Parent unit power adapter: Output: 6V DC 800mA

oriented in a vertical or floor mount position. The

if it is plugged into a ceiling, under-the-table or

prongs are not designed to hold the plug in plac